



Inverter Installation Manual

Solare Datensysteme GmbH
Fuhrmannstr. 9
72351 Geislingen-Binsdorf
Germany

International support
Tel.: +49 7428 9418 -640
Fax: +49 7428 9418 -280

e-mail: support@solar-log.com

Italy
Technical support: +39 0471 631032
e-mail: italy-support@solar-log.com

France
Technical support: +33 97 7909708
e-mail: france-support@solar-log.com

Switzerland
Technical support: +41 565 355346
e-mail: switzerland-fl-support@solar-log.com

Holland
Technical support: +31 85 888 1110
e-mail: benelux-support@solar-log.com

Belgium
Technical support: +32 553 03670
e-mail: benelux-support@solar-log.com

United States
Technical support: +1 203 702 7189
e-mail: usa-support@solar-log.com

Australia & New Zealand
Technical support: +61 1300 79 20 01
e-mail: australia@solar-log.com

Table of Contents

1	Connections.....	13
1.1	Solar-Log™ RS485/422 B connection assignments (6 pin)	13
1.2	RJ45	14
1.3	RJ11 Configuration.....	15
2	Connecting the inverters	16
2.1	Switch off the inverters and Solar-Log™	17
3	ABB.....	18
3.1	ABB PVS300	18
3.2	ABB Central Inverters.....	19
4	AEG.....	20
4.1	AEG PS	20
4.2	AEG Protect	22
5	Albatech.....	24
5.1	Albatech APL Trifase 15 / 20	24
5.2	Albatech APL Monofase	26
6	ALPHA-SOL	28
6.1	ALPHA-SOL.....	28
7	AROS Solar Technology.....	31
7.1	AROS Solar Technology (RS422)	31
7.2	AROS Solar Technology (RS485)	33
8	Aten	35
8.1	Aten	35

9	Benning	37
9.1	Benning	37
10	Carlo Gavazzi	39
10.1	Carlo Gavazzi - ISMG model	39
10.2	Carlo Gavazzi - HINRG model	41
11	Chint Power	43
11.1	Chint Power (CSP SC and CSP SCE to 20k)	43
11.2	Chint Power (CPS 20k+)	45
11.3	Chint Power Modbus	47
12	CMS	49
12.1	CMS	49
13	Conergy	51
13.1	Conergy (only Solar-Log 1000 and 2000)	51
14	CyberPower	53
14.1	CyberPower	53
15	Danfoss	55
15.1	Danfoss	55
16	Delta	57
16.1	Delta (RS485)	57
17	Eaton	59
17.1	Eaton	59
18	Effekta	61
18.1	Effekta	61
18.2	Effekta KS Multitracker	63

18.3	Effekta KS Singletracker.....	65
19	Enfinity	67
19.1	Enfinity	67
20	EHE	69
20.1	EHE N1k5TL to N50kTL	69
20.2	EHE N10k to N100k	71
20.3	EHE N250k to N500k-TL.....	73
21	EKO Energy	75
21.1	EKO Energy	75
22	Eltek.....	77
22.1	Eltek.....	77
22.2	Eltek central inverter.....	79
23	Europa-Solar AG.....	81
23.1	Europa-Solar AG.....	81
24	Evoco	83
24.1	Evoco	83
25	Fronius.....	85
25.1	Fronius with ComCard	85
25.2	Fronius RL.....	87
26	Gefran	88
26.1	Gefran	88
27	General Electric inverters (GE).....	91
27.1	General Electric inverters (GE)	91

28	GESOLAR	92
28.1	GESOLAR	92
29	Ginlong	94
29.1	Ginlong	94
30	GMDE	96
30.1	GMDE	96
31	GoodWe	98
31.1	GoodWe	98
32	Growatt	100
32.1	Growatt	100
33	GTec	102
33.1	GTec	102
34	Helios Systems	104
34.1	Helios Systems	104
35	Huawei	106
35.1	Huawei	106
36	Hyundai	108
36.1	Hyundai HPC-050HT-E and HPC-100HT-E	108
36.2	Hyundai HPC-250HT-E	110
37	Ingeteam	112
37.1	Ingeteam	112

38	Kaco.....	114
38.1	Kaco - Powador	114
38.2	Kaco - PVI Blue Planet.....	116
39	KLNE	118
39.1	KLNE (Solartec and Sunteams).....	118
40	Kostal and Solar-Fabrik.....	120
40.1	Kostal Pico and Solar-Fabrik Inverter Convert T (RS485)	120
40.2	Kostal Ethernet Version	122
41	Kstar	124
41.1	Kstar Multitracker.....	124
41.2	Kstar Singletracker	126
42	Mastervolt.....	128
42.1	Mastervolt (RS485)	128
43	Mitsubishi.....	130
43.1	Mitsubishi with RS485 interface.....	130
44	Motech.....	132
44.1	Motech (RS485).....	132
45	Oelmaier.....	134
45.1	Oelmaier	134
46	Omnik.....	136
46.1	Omnik	136
47	Omron.....	138
47.1	Omron.....	138

48	Pairan	140
48.1	Pairan	140
49	Platinum	142
49.1	Platinum with RS485 interface	142
49.2	Platinum H.....	144
50	Powercom	146
50.1	Powercom	146
51	Power-One/Aurora.....	149
51.1	Power-One/Aurora.....	149
52	PrimeVOLT	151
52.1	PrimeVOLT	151
53	PVPowered	153
53.1	PV Powered – central inverter RS485	153
53.2	PV Powered - string inverter.....	155
54	Q3	156
54.1	Q3 (RS485).....	156
55	REFUSOL.....	158
55.1	REFUSOL.....	158
56	REP	161
56.1	REP	161
57	Reverberi	163
57.1	Reverberi (EDI Series).....	163

58	Riello.....	165
58.1	Riello	165
59	SALICRU	167
59.1	SALICRU EQX.....	167
59.2	SALICRU EQXLV.....	169
60	Samil Power.....	170
60.1	Samil Power.....	170
61	Santerno.....	172
61.1	Santerno	172
62	Schneider Electric	174
62.1	Schneider Electric SunEzy.....	174
62.2	Schneider Electric Xantrex GT30E.....	176
62.3	Schneider Electric Conext TL15000E and Conext TL20000E.....	177
63	Schüco	179
63.1	Schüco SGI series (RS485).....	179
64	Shindengen.....	181
64.1	Shindengen.....	181
65	Siemens.....	183
65.1	Siemens.....	183
66	SMA.....	186
66.1	Overview.....	186
66.2	SMA connection using special RS485 piggyback card.....	187
66.3	Connect SMA with original SMA RS485 piggy back and the SMARS485 data module.....	190
66.4	SMA Bluetooth mode	192
66.5	SMA Meter Connection Box.....	193
66.6	SMA Speedwire.....	194

67	SolarEdge	196
67.1	SolarEdge.....	196
68	Solar Max	198
68.1	SolarMax – S, C and MT series.....	198
68.2	SolarMax – Cx series	200
68.3	SolarMax – E series.....	202
69	SolaX Power	204
69.1	SolaX Power X1	204
69.2	SolaX Power X3	206
70	Solectria	208
70.1	Solectria >9k	208
70.2	Solectria <9k	210
71	Solutronic	212
71.1	Solutronic SP25-55 (RS485).....	212
71.2	Solutronic SP100, SP120 (RS485).....	214
72	Steca.....	216
72.1	Steca	216
72.2	Steca (larger than 17k)	218
73	Sungrow.....	220
73.1	Sungrow.....	220
74	Suntechnics	222
74.1	Suntechnics (only Solar-Log 1000 and 2000)	222
75	Suntigua.....	224
75.1	Suntigua.....	224

76	Sunville	226
76.1	Sunville	226
77	Sunways	228
77.1	Sunways - AT/NT/PT	228
78	Sustainable Energy	230
78.1	Sustainable Energy	230
79	Trannergy	232
79.1	Trannergy	232
80	Vaillant	234
80.1	Vaillant – auroPOWER VPI /1 and VPI (RS485)	234
81	Valenia	236
81.1	Valenia	236
82	Vectron	238
82.1	Vectron	238
83	Vision	240
83.1	Vision Multitracker	240
83.2	Vision Singletracker	242
84	Voltwerk	244
84.1	Voltwerk (only Solar-Log 1000 and 2000)	244
85	WINAICO	246
85.1	WINAICO	246

86	Yaskawa.....	249
86.1	Yaskawa	249
87	Zentral Solar Deutschland ZSD.....	251
87.1	Zentral Solar Deutschland ZSD (RS485)	251
87.2	Zentral Solar Deutschland ZSD - zentralpower	253
88	Zeversolar.....	254
88.1	Zeversolar.....	254
89	Appendix	256
89.1	SMA mixed wiring.....	256
89.2	Interconnection of Kaco Powador inverters	257
90	List of figures	258

1 Connections

1.1 Solar-Log™ RS485/422 B connection assignments (6 pin)

The RS485/422 inverter B connection on the Solar-Log™ is pre-set for use with a Fronius/Eaton inverter, and is assigned as follows:

PIN	RS485 A	RS485/422 B	RS422 (for Fronius/Eaton)
1	Data+	Data+	T/RX+
2	12 V	12 V	12 V
3	Ground	Ground	Ground
4	Data-	Data-	Data-
5			T/RX+
6			T/RX-

The connection labels Data+/Data- are specific to the manufacturer and may also be labeled A/B, or similar.

Green 6-pin terminal block connectors are supplied for connecting the first inverter to the RS485/422 B interface of the Solar-Log™.

1.2 RJ45

Some inverter manufacturers use RJ45 jacks on their units.

The pin assignments are manufacturer-specific.

Connect the RS485/422 B and/or the RS485 interface of the Solar-Log™ in accordance with the description on the particular inverter. The details are described in detail in a separate manual..

Refer to the following document for the numbering of the pins for the RJ45 connection.

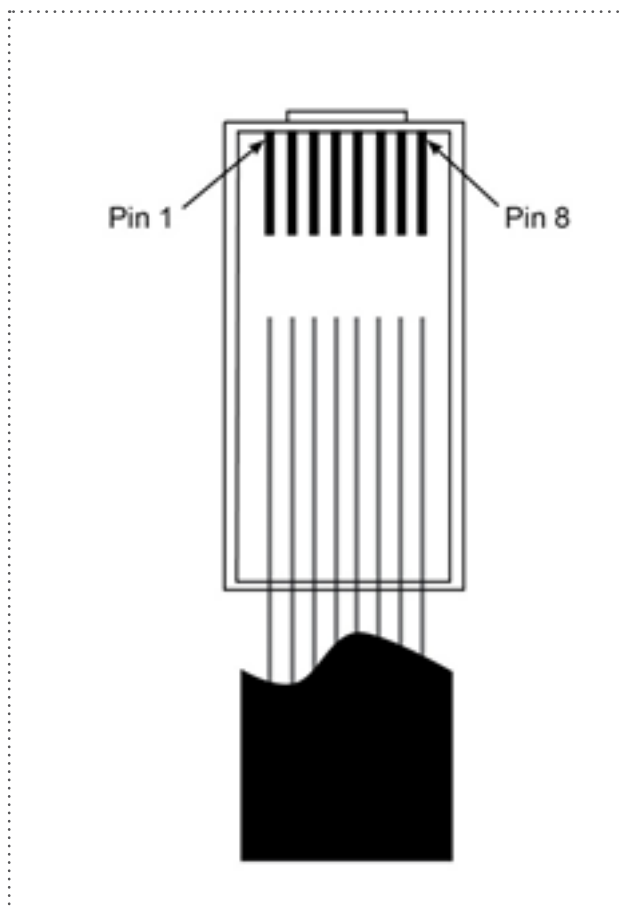


Figure 1: RJ45 plug pin assignments



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

1.3 RJ11 Configuration

Some inverter manufacturers use RJ11 jacks on their units.

The pin assignments are manufacturer-specific.

Connect the RS485/422 B and/or the RS485 interface of the Solar-Log™ in accordance with the description on the particular inverter.

Refer to the following document for the numbering of the pins for the RJ45 connection.

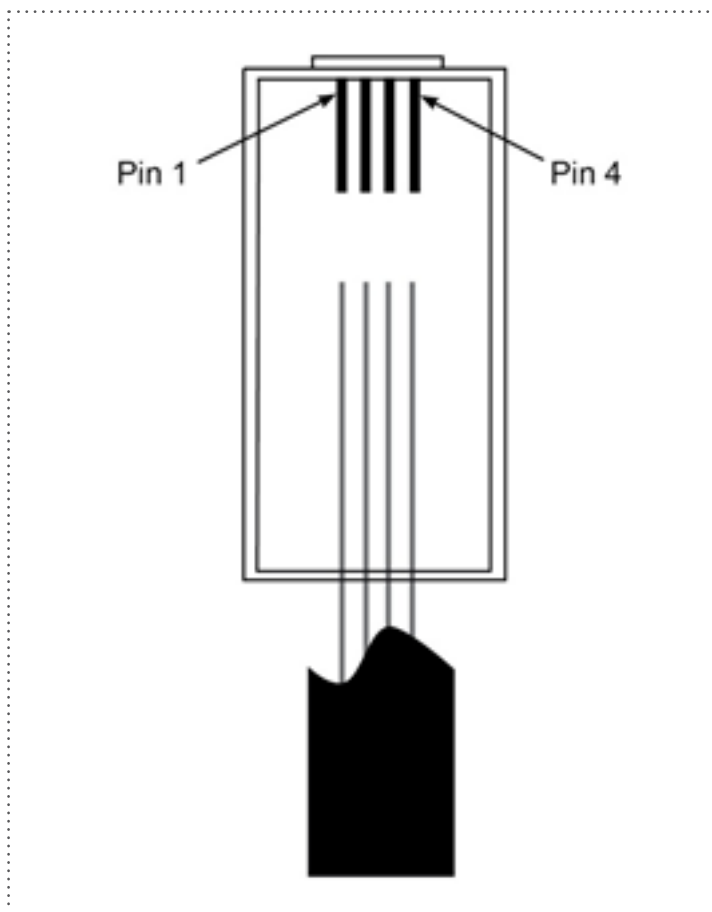


Figure 2: RJ11 plug pin assignments



Caution

Risk of damage to the unit!

The Solar-Log™ has an RJ45 socket, which must never be connected to the RJ11 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

2 Connecting the inverters

As each inverter manufacturer uses different wiring connections and connectors, the corresponding data cables must be adapted correctly.

- You will find the terminal strip block wiring diagram to connect the inverters in table form in the following sections on connecting inverters.
- Refer the Installation Manual for assignment of the RS485/422 B connection to the Solar-Log™.



Note

Solare Datensysteme GmbH supplies suitable connection cables for most inverter manufacturers.

Always read the manufacturer-specific instructions for connecting the data cable. You will find these instructions in the manufacturer's documentation.

However, when assigning the inverter wiring on the Solar-Log™ (RS485/422 B connection), follow the instructions in this manual, otherwise the inverters will not be detected by Solar-Log™.

Danger

Risk of death by electric shock if inverters are opened.



- Never open the inverter housing when the inverter is connected to power.
 - Switching inverters off.
 - Always read the installation and safety instructions given in the manual for the corresponding inverter.
 - Any work on inverters must only be carried out by trained electricians.
-

Caution

Damage to the electrical components in inverters and on interface cards due to electrostatic discharge.



- Avoid contact with component connections and plug contacts.
 - Before picking up the component, ground yourself by holding the PE or the unpainted part of the inverter housing.
-

Caution

Damage to the electrical components of the Solar-Log™ due to the wiring of the Solar-Log™!



- Switching the Solar-Log™ off.
-

2.1 Switch off the inverters and Solar-Log™.

Switching inverters off

Always turn off all of the inverters first before making a cable connection between the Solar-Log™ and the connections inside the inverter; and before installing an interface card in the inverter,

To do this, read the manufacturer's documentation for the inverter, and proceed as follows:

1. Disconnect the AC side
2. Disconnect the DC side
3. Wait at least 5 minutes until the condensers in the inverters have discharged.

Switching the Solar-Log™ off

- Remove the power plug from the socket or the "Power 12 V" jack on the Solar-Log™.

3 ABB

3.1 ABB PVS300

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Where to connect: X4 terminal block under the cover.
- Communication address must be allocated.
- 3-pin wiring
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.

Procedure

1. Unscrew the side cover as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	X4 terminal block inverter
Terminal	PIN
► 1	1 - Data+
► 3	3 - GND
► 4	2 - Data-

3. If only one inverter is to be connected, according to the manufacturer's handbook it must be terminated.
4. Screw the inverter cover on again.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: X4 terminal block under the cover.

Procedure

1. Unscrew the side cover as shown in the inverter's instructions.
2. Connect the self-made RS-485 cable to the X4 terminal block on inverter 1.
3. Connect the self-made RS-485 cable to the X4 terminal block on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter according to the inverter instructions.
6. Screw the inverter cover on again.

3.2 ABB Central Inverters

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	Yes	-	-	LAN

Overview

- Interface not integrated; Retrofit components (with the label "RETA-01").
- Connected using network cable (patch cable) and Ethernet router or switch
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Allocate communication address

- Recommendation: Continuous numbering starting with 1; address range 1 to 254.
- Setting: Using the inverter operating display
- Procedure: Before connecting to the Ethernet router or switch and allocating the IP address.

Connect inverters and the Solar-Log™.

The wiring is done using a

- network cable (patch cable) and the
- Ethernet router or switch.

Procedure

1. Set different unit IDs on each inverter in accordance with the inverter's instructions.
2. Connect the Solar-Log™ and the inverter to the router or switch.
3. Assign an IP address to every inverter. Assign the IP addresses according to the inverter's instructions.

The first three number blocks like the Solar-Log™, e.g. **192.168.178**.49.

The fourth number block: an address that is available, e.g. 192.168.178.50.

4 AEG

4.1 AEG PS

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned.
- Multi-string technology

AEG inverters are fitted with 1 or 3 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.



Note

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface

Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.



Note
Only connect inverter using the RS485/422 B/C interface.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.
5. Close inverters.

4.2 AEG Protect

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Terminating plug	nen	Yes	Yes	RS485

Overview

- Supported models PV 10; 12.5 and 15
- Where to connect: 2 RJ45 sockets on the right on the side cover
- Communication address does not have to be assigned
- 4-pin wiring
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made RJ45 data cable (optional extra; not supplied)

or

- self-made cable connection with RS485 data cable and terminal block connector.

Procedure

1. Unscrew the side cover as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	6
▶ 3	1
▶ 3	2
▶ 4	3



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).

3. If only one inverter is to be connected this must be terminated.
Insert the supplied connection plug into any free RJ45 socket on the inverter.

The connection plug is an 8-pin dummy plug with bridged wires: Bridge wires 3 and 4 and wires 5 and 6.

4. Screw the inverter cover on again.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)

- Where to connect: 2 RJ45 sockets on the right on the side cover

Procedure

1. Unscrew the side cover as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. Insert the other end of the wire into any RJ45 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter.
Insert the connection plug into the free RJ45 socket.
6. Screw the inverter cover on again.

5 Albatech

5.1 Albatech APL Trifase 15 / 20

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Jumper	Yes	Yes	Yes	RS485

Inverters from different Albatech model ranges (APL monophase / triphase) cannot be mixed on an RS485 connection. The correct range must be selected when selecting inverters.

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other



Note:
If more than 32 inverters are connected a signal amplifier must be installed in the RS485 bus in accordance with the manufacturer.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 3 wire data cable and terminal block connector.

It is connected to the inverter as shown in the following diagram. The inverters are terminated on pin 9/10 of J1. Both the first and also the last inverter must be terminated.

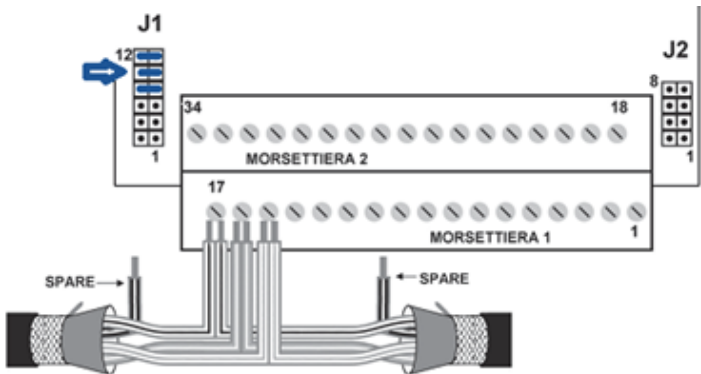


Figure 13: Albatech APL block connector

Procedure

1. Switch off the inverters and Solar-Log™
2. Unscrew the side cover as shown in the inverter's instructions.
3. Pull the free wires through the wire opening in the inverter.
4. If you have made the cable connection yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	PIN
▶ 1 (Data +)	▶ 15 (RS485 +)
▶ 3 (Ground)	▶ 17 (Ground)
▶ 4 (Data-)	▶ 16 (RS485 -)

5. Connect data cable to RS485+, RS485- and grounded terminals.
6. If only one inverter is to be connected this must be terminated.
7. To terminate set the jumper at J1 to pins 9 and 10.
8. Screw the inverter cover on again.
9. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

The wiring is done using a

- self-made, shielded 3 wire data cable.
- Where to connect: Terminal strip inside the inverter

Procedure

1. Switch off the inverters and Solar-Log™
2. Unscrew the side cover as shown in the inverter's instructions.
3. Connect data cable to RS485+, RS485- and grounded terminals.
4. Connect the other inverters to each other in the same way.
5. Terminate on the first and last inverters.
6. Set the jumper at J1 to pins 9 and 10.
7. Screw the inverter cover on again.
8. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication addresses

Before the inverters can be detected addresses must be allocated to them. To do this you must connect to the unit either via the Ethernet or RS232. You will find details on this procedure in the inverter's handbook. Now set another address (1 - 247) from the modbus parameters for each inverter and leave the baud rate at 19200 bit/s.



Note:

When selecting inverters "APL triphase" must be selected.

5.2 Albatech APL Monofase

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Jumper	Yes	Yes	Yes	RS485

APL Monofase 2.0/3.0/4.0/5.0

Inverters from different Albatech model ranges (APL monophase / triphase) cannot be mixed on an RS485 connection. The correct range must be selected when selecting inverters.

Overview

- Interface not integrated; Upgrade the Albatech RS485 interface
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Installing the RS485 interface

Procedure

- Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
► 1	► Pin 2 - D+
► 3	► Pin 3 - GND
► 4	► Pin 1 - D-

3. If only one inverter is to be connected this must be terminated.
Set the jumper on the RS485 interface card to ON.
4. Close the inverter if no other inverters are to be connected.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 wire, shielded data cable
- Where to connect: on the upgraded RS485 interface.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Using the data cable connect terminals "Pin 2-RS485-A (+)", "Pin 3-GND" and "Pin 1-RS485-B (-)" of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
5. Set the jumper on the RS485 interface card to ON.
6. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions



Note:

When selecting inverters "APL monophase" must be selected.

6 ALPHA-SOL

6.1 ALPHA-SOL

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Switch	Yes	Yes	Yes	RS485

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin wiring
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the DIP switch on the interface card.

Before installing the RS485 interface card:

- Allocate the communication address using the 8 interface card DIP switches:

Example - Communication address 1:

On								
Off								
DIP switch								

Example - Communication address 2:

On								
Off								
DIP switch								

Example - Communication address 3:

On								
Off								
DIP switch								

Example - Communication address 4:

On								
Off								
DIP switch								

Example - Communication address 5:

On								
Off								
DIP switch								

You will find more information at:

http://en.wikipedia.org/wiki/Binary_number.

Installing the RS485 interface

Procedure

- Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BKL2 data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 1	▶ T+
▶ 4	▶ R-
▶ 4	▶ T-

- 4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
- 5. Close the inverter if no other inverters are to be connected.
- 6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter on the retrofitted RS485 interface card

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Connect terminals R+, T+, R- and R+ of inverter 1 to the corresponding terminals on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Terminate in the last inverter according to the inverter instructions.
- 5. Close inverters.

7 AROS Solar Technology

7.1 AROS Solar Technology (RS422)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Select "Aros 422" during the inverter detection

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 4-pin cable only on RS485/422 B/C connection of the Solar-Log™
- Communication address does not have to be assigned



Note:

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup in the [Configuration | Device | Configuration | Order](#) menu box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.



Note
Only connect inverter using the RS485/422 B /C interface.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	PIN
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

2. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
3. Insert the terminal block connector into the Solar-Log™ RS485/422 B/C socket

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.
5. Close inverters.

7.2 AROS Solar Technology (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	Yes	Yes	RS485

Select "Aros 485" during the inverter detection

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- Communication address does not have to be assigned



Note:

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup in the [Configuration | Device | Configuration | Order](#) menu box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ A (+)
▶ 3	▶ GND
▶ 4	▶ B (-)

2. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals A+, GND and B- on inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.
5. Close inverters.

8 Aten

8.1 Aten

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	No	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ14 socket on the outside of the inverter.
- 2-pin wiring
- Communication address does not have to be assigned.

Installation steps

- Switch off the inverters and Solar-Log™
- Connect inverters to the Solar-Log™
- Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	Inverters
RS485/422 B	RJ 14 socket
▶ 1	▶ Pin 2 - Data +
▶ 4	▶ Pin 4 - Data -

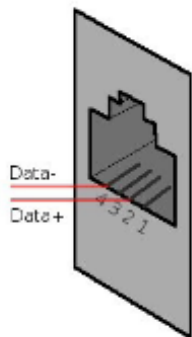


Figure 14: RJ14 socket pin allocation

2. Close the inverter if no other inverters are to be connected.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: RJ14 sockets.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the self-made cable with the RJ14 plug into any RJ14 socket on inverter 1.
3. Insert the RJ11 cable into the 2nd RJ11 socket on inverter 1 and into any RJ11 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Close inverters.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

9 Benning

9.1 Benning

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	No	Yes	Yes	Yes	LAN

Overview

- Integrated interface
- The inverter's IP address has to be assigned.
- Connected using network cable (patch cable) and Ethernet router or switch
- Installation steps
 - The inverter's has to be assigned a static IP address.
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™ (RJ45).
 - Connect the inverters to each other (RJ45).

Connect inverters to the Solar-Log™

The wiring is done using a

- network cable (patch cable/crossover cable) and the
- Ethernet router or switch.

Connect the inverters to each other

The inverters are connected together using the RJ45 interface and, if needed, a router or switch.

Connection setup according to the inverter's instructions.

Assigning IP addresses

- A static IP address has to be assigned to the inverter via the display.
- Please select an IP address with the same class C subnet as the Solar-Log™.
For example: The Solar-Log™ has the IP address 192.168.178.49.
The inverter in this case has to have a free IP address in the same range (from 192.168.178.1 to 192.168.178.254).
- Procedure: Start according to the inverter's instructions



Note

Each inverter has to be individually reachable via the network. For this, the network interface has to be activated for every inverter (select "Activate LAN" under the LAN menu) and the inverter needs to be connected to the local access network (LAN) via a switch.

Detection from the Solar-Log™

- For the detection on the Solar-Log™, select "Benning" as the inverter manufacturer in the **Configuration | Devices | Definition** menu from the **Network** section. Confirm the selection with **Save**.

Detection from the Solar-Log 1200

- When using the Solar-Log 1200, the detection can also be started from the display. Select "Benning" as the manufacturer for the inverter detection from the "network" interface and start the detection.



Note for feed-in management

Supported by Solar-Log
starting with inverter firmware version 19



Note

Using the inverter's web interface, select "External control via network interface" under "Settings -> Installation -> Grid Company Settings -> Power Reduction," and under "cos(phi) Settings."

10 Carlo Gavazzi

10.1 Carlo Gavazzi - ISMG model

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	No	Yes	Yes	RS485

Select "Gavazzi ISMG" during the inverter detection

Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 2-pin wiring
- Communication address does not have to be assigned.


Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ2 data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable and terminal block connector.

Installation steps

- Switch off the inverters and Solar-Log™
- Connect inverters to the Solar-Log™
- Connect the inverters to each other



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► **Only connect inverters via the RS485/422 Solar-Log™ interface(s).**

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	Inverters
RS485/422 B	RJ 45 socket
► 1	► Pin 7
► 4	► Pin 8

2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket on the outside of the inverter

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the cable into any RJ11 socket on inverter 2.
3. Connect the other inverters to each other in the same way.

10.2 Carlo Gavazzi - HINRG model

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select "Gavazzi HINRG" during the inverter detection

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
► 1 A/Data+	► 1 T/R 1+
► 4 B/Data-	► 2 T/R 1-

3. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch for the terminal resistor to ON.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
RS485 terminal	RS485 terminal
▶ 1 T/R 1+	▶ 1 T/R 2+
▶ 2 T/R 1-	▶ 2 T/R 2-

- 3. Connect terminals A and B on inverter 1 to the corresponding terminals on inverter 2.
- 4. Connect the other inverters to each other in the same way.
- 5. Terminate in the last inverter.
Set the DIP switch for the terminal resistor to ON.
- 6. Close inverters.
- 7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter DIP switch
- Procedure: Start according to the inverter’s instructions

11 Chint Power

11.1 Chint Power (CSP SC and CSP SCE to 20k)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- Where to connect: RJ45 socket on the outside of the inverter
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned

Note:



The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Select the Chint CPS<20k inverter during the initial configuration.

Installing the RS485 interface

Procedure

- ▶ Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ1 data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.

Procedure



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).



Note

Only connect inverter using the RS485/422 B/C interface.

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ Pin 3
▶ 4	▶ Pin 6
▶ 5	▶ Pin 1
▶ 6	▶ Pin 2

2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket on the outside of the inverter

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

11.2 Chint Power (CPS 20k+)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface.
- Where to connect: RJ45 socket on the outside of the inverter.
- 2-pin wiring.
- The communication addresses (1-32) have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™.
 - Connect inverters to the Solar-Log™.
 - Connect the inverters to each other

Select the Chint CPS20k+ inverter during the initial configuration.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.

Procedure



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).

1. Connect wires as shown in the diagram below.

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ 1-485+
▶ 4	▶ 3-485-

2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable).
- Where to connect: RJ45 socket on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.
5. Allocate communication address.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Address range: 1 - 32
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

11.3 Chint Power Modbus

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	No	Yes	Yes	Yes	RS485

The following types are to be connected according to this diagram:

CPS SCA5KTL-DO
CPS SCA6KTL-DO
CPS SCA7KTL-DO
CPS SCA8KTL-DO
CPS SCA10KTL-DO
CPS SCA12KTL-DO
CPS SCA8KTL-DO/HE
CPS SCA10KTL-DO/HE
CPS SCA12KTL-DO/HE

Select the inverter Chint-Mod for the inverter detection.

Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 2-pin wiring
- The communication addresses (1-247) have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a RJ45 socket and a terminal block connector.

Procedure

- 1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 socket
Terminal	PIN
▶ 1	▶ 1 (+)
▶ 4	▶ 3 (-)

- 2. Insert the RJ45 plug into the RJ45 socket on the inverter.
- 3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

- 1. Insert the RJ45 plug into the RJ45 socket on the first inverter.
- 2. Insert the other end of the wire into any RJ45 socket on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Address range: 1 - 247
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter’s instructions

12 CMS

12.1 CMS

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
▶ 1 A/Data+	▶ 1 T/R 1+
▶ 4 B/Data-	▶ 2 T/R 1-

3. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch for the terminal resistor to ON.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
RS485 terminal	RS485 terminal
▶ 1 T/R 1+	▶ 1 T/R 2+
▶ 2 T/R 1-	▶ 2 T/R 2-

- 3. Connect terminals A and B on inverter 1 to the corresponding terminals on inverter 2.
- 4. Connect the other inverters to each other in the same way.
- 5. Terminate in the last inverter.
Set the DIP switch for the terminal resistor to ON.
- 6. Close inverters.
- 7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter DIP switch
- Procedure: Start according to the inverter’s instructions

13 Conergy

13.1 Conergy (only Solar-Log 1000 and 2000)



Note

Conergy inverters can only be connected to the Solar-Log 1000 and 2000, as only this one has a CAN interface.

The following description relates to inverters without transformers produced in or after 2007.

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	CAN bus

Overview

- CAN only to be used on Solar-Log 1000 and 2000 (CAN interface).
- Integrated interface
- Where to connect: CAN socket on the outside of the bottom of the inverter.
- Only use ready-made cable sets.
Two different special cable sets must be ordered separately.
 - Prefabricated cable set between the Solar-Log 1000 and 2000 and the first inverter, including cable termination.
 - Ready-made cable set with 5 pin Phoenix contact connection plug for connecting the inverters to each other.
 - Depending on the number of inverters several of these cables will be required.

Maximum total cable length: 200 m

- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect the inverters to the Solar-Log 1000 and 2000.

Connection is only done using a ready-made data cable, specially for connecting to the Solar-Log 1000 and 2000 (optional extra; not supplied).

Procedure

1. Insert the CAN plug into the inverter CAN IN socket.
2. If only one inverter is to be connected this must be terminated.
Insert the two 5 pin 120 Ω terminal resistors from the ready-made cable set into the CAN OUT socket.
3. Insert the terminal block connector into the Solar-Log 1000 and 2000 CAN socket.

Connecting inverters to each other (only Solar-Log1000 and 2000)

- Connection is made only with a ready-made data cable specially for connecting the inverters to each other (optional extra: not supplied).
- Where to connect: CAN socket outside the inverter.

Procedure

1. Insert the CAN plug into any CAN OUT socket on inverter 1.
2. Insert the other end of the wire into any CAN IN socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Insert the two 5 pin 120 Ω terminal resistors from the ready-made cable set into the CAN OUT socket.

14 CyberPower

14.1 CyberPower

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated RS485 interface
- 8-pin cable for the RS485 connection of the Solar-Log™
- The communication addresses (1-247) have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- partially ready-made RJ45 cable (not included)

or

- self-made data cable with RJ45 plug and 6-pin terminal block connector



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. Connect wires as shown in the diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1 (Data+) A	► 3 RS485 A
► 4 (Data-) B	► 4 RS485 B

2. Run the wire from the Solar-Log™ to inverter 1 through the hole for the wire on the bottom of the unit.
3. In the inverter insert the RJ45 plug into the "RS-485 out" socket.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable).
- Where to connect: RJ45 socket on the outside of the inverter.

Procedure

1. Insert the RJ45 plug in inverter 1 into the RJ45 socket.
2. Insert the other end of the wire into the other RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.
5. Terminate in the last inverter according to the inverter instructions.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Address range: 1 - 247
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

15 Danfoss

15.1 Danfoss

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Connection plug	No	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: 2 RJ45 sockets on the right on the side cover
- Communication address does not have to be assigned
- 4-pin wiring
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made RJ45 data cable (optional extra; not supplied)

or

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

The Master Mode has to be deactivated in the Pro series devices. See the manufacturer's manual for more detailed instructions.

Procedure

1. Unscrew the side cover as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	6
▶ 3	1
▶ 3	2
▶ 4	3



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► **Only connect inverters via the RS485/422 Solar-Log™ interface(s).**

3. If only one inverter is to be connected this must be terminated.
Insert the supplied connection plug into any free RJ45 socket on the inverter.

The connection plug is an 8-pin dummy plug with bridged wires: Bridge wires 3 and 4 and wires 5 and 6.

4. Screw the inverter cover on again.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: 2 RJ45 sockets on the right on the side cover

Procedure

1. Unscrew the side cover as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. Insert the other end of the wire into any RJ45 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter.
Insert the connection plug into the free RJ45 socket.
6. Screw the inverter cover on again.

16 Delta

16.1 Delta (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Resistor	Yes	Yes	Yes	RS485


Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made Delta data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!


The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 7
► 4	► 6
► 4	► 8



Note

The PIN allocation has been changed with the new generation. 3 wired cabling functions with both generations.

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is connected this must be terminated.
Insert the 120 Ω resistor into the free RJ45 socket.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.
5. Close the unit cover on the bottom of the inverter.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Insert the 120 Ω resistor into the free RJ45 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Set the inverter baud rate to 19200.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

17 Eaton

17.1 Eaton

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned
- Multi-string technology

Eaton inverters are fitted with 1 or 3 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.

Note



The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Disconnect the power for the inverter and Solar-Log™
 - Connect the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface

Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.



Note
Only connect inverter using the RS485/422 B/C interface.

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Pull the free wires through the wire opening in the inverter.
- 3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

- 4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
- 5. Close the inverter if no other inverters are to be connected.
- 6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Terminate in the last inverter according to the inverter instructions.
- 5. Close inverters.

18 Effekta

18.1 Effekta

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Jumper	Yes	Yes	Yes	RS485

Select "Effekta ES" during the inverter detection

Overview

- Interface not integrated; Retrofit Effekta RS485 interface.
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Installing the RS485 interface

Procedure

- ▶ Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ Pin 2 RS485 A (+)
▶ 3	▶ Pin 3 GND
▶ 4	▶ Pin 1 RS485 B (-)

3. If only one inverter is to be connected this must be terminated.
Set the jumper on the RS485 interface card to ON.
4. Close the inverter if no other inverters are to be connected.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface).

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Using the data cable connect terminals "Pin 2-RS485-A (+)", "Pin 3-GND" and "Pin 1-RS485-B (-)" of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Set the jumper on the RS485 interface card to ON.
5. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

18.2 Effekta KS Multitracker

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select “Effekta KS” during the inverter detection

Overview

- Integrated interface
- 3-pin wiring
- 2 RJ45 sockets on the outside of the inverter.
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address.
Address range 1 to 32
Settings on the inverter’s display according to the manufacturer’s manual.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1 A/Data +	▶ Pin 1 (A) T/R+
▶ 3 GND	▶ Pin 5 GND
▶ 4 B/Data -	▶ Pin 2 (B) T/R-

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected this must be terminated.
Set the dip switch to “on.”
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable) (**No** Crossover cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter, set the DIP switch to “on.”

Allocate communication address

- Recommendation: Continuous numbering from 1 to 32
- Setting: Using the inverter operating display.
- Procedure: Start according to the inverter’s instructions.



Note

The following setting needs to be enable so that the PM parameters can be received.
SETUP -> REMOTE CNTRL -> ENABLE

18.3 Effekta KS Singletracker

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select “Effekta KS ST” during the inverter detection

Overview

- Integrated interface
- 3-pin wiring
- 2 RJ45 sockets on the outside of the inverter.
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address.
Address range 1 to 254
Settings on the inverter’s display according to the manufacturer’s manual.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1 A/Data +	▶ Pin 1 (A) T/R+
▶ 3 GND	▶ Pin 5 GND
▶ 4 B/Data -	▶ Pin 2 (B) T/R-

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected this must be terminated.
Set the dip switch to “on.”
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable) (**No** Crossover cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter, set the DIP switch to “on.”

Allocate communication address

- Recommendation: Continuous numbering from 1 to 254
- Setting: Using the inverter operating display.
- Procedure: Start according to the inverter’s instructions.

19 Enfinity

19.1 Enfinity

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	Yes	No	No	RS422

Overview

- Integrated interface
- 2 RJ11 sockets inside the inverter.
- 4-pin wiring
- Communication address does not have to be assigned.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other



Note
Only connect inverter using the RS485/422 B/C interface.

Connect inverters to the Solar-Log™.

The wiring is done using a

- self-made, shielded 4 wire data cable and terminal block connector.
- Where to connect: RJ11 socket on the inverter.

Procedure

Open the inverter as shown in the inverter's instructions.

1. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ Pin 3 - RX+
▶ 4	▶ Pin 4- RX-
▶ 5	▶ Pin 1 - TX+
▶ 6	▶ Pin 2 TX-

2. Insert the RJ11plug into any RJ11 socket on inverter 1.
3. Close the inverter if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

Connect the inverters to each other

- Wiring using the RJ11 cable
- Where to connect: RJ11 sockets

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the self-made cable with the RJ11 plug into any RJ11 socket on inverter 1. Connect the other end to the terminal plug on the Solar-Log™
3. Insert the RJ11 cable into the second RJ11 socket on the first inverter and into any RJ11 socket on the second inverter.
4. Connect the other inverters to each other in the same way.
5. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.
6. Close inverters.

20 EHE

Ehe offers three wiring options for their various models.

Some models can be connected using a bus. Please note that the wires (Data + and Data-) always have to properly connected together.

20.1 EHE N1k5TL to N50kTL

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

The following types are to be connected according to this diagram:

N1K5TL, N2KTL, N3KTL, N4KTL, N5KTL, N6KTL, N10KTL, N12KTL, N15KTL, N17KTL, N20KTL, N30KTL, N50KTL

Overview

- Integrated interface
- Where to connect: RJ45 socket (RS485(WiFi)), on the outside of the inverter.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Enter the communication address on the interver's display.

Every address may only be used once.

Address range 1 to 247.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.
- Where to connect: RJ45 socket (RS485(WiFi)), on the outside of the inverter.

Procedure

- If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	PIN
▶ 1 (Data+)	Pin 4 - 485+ (A)
▶ 4 (Data-)	Pin 5 - 485- (B)

- If only one inverter is to be connected, according to the manufacturer's handbook it must be terminated.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect with a shielded twisted-pair cable.
- Where to connect: RJ45 socket (RS485(WiFi)), on the outside of the inverter.

Procedure

- If you make the cable yourself, connect the wires as shown in the diagram:

Terminal strip inside the second inverter	Terminal strip inside the second inverter
PIN	PIN
Pin 4 - 485+ (A)	Pin 4 - 485+ (A)
Pin 5 - 485- (B)	Pin 5 - 485- (B)

- Wire the remaining inverters to each other according to the manufacturer's specifications.
- Terminate the last inverter according to the inverter instructions.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

The RS485 sockets are each double connections so that the wiring can also be continued to the next inverter.

Procedure

1. Connect the data cable to the free blocks A, B and G on inverter 1.
2. Connect the other end of the cable to the blocks A, B and G on inverter 2.
3. Connect the remaining inverters in the same way.
4. Terminate in the last inverter according to the manufacturer's instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Notes on inverter addresses

- Recommendation: Continuous numbering starting with 1.
- Settings: On the inverter operating display.
- Procedure: Follow the manufacturer's documentation for the inverter.

20.2 EHE N10k to N100k

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

The following types are to be connected according to this diagram:

N10K, N20K, N30K, N50K, N100K

Overview

- Integrated interface
 - Where to connect: Terminal strip inside the inverter
 - 2-pin wiring
 - Communication address must be allocated.
 - Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Enter the communication address on the inverter's display.
- Every address may only be used once.
Address range 1 to 247.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.
- Where to connect: Terminal strip inside the inverter

Procedure

- If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	Terminal
▶ 1 (Data+)	JX2 - A
▶ 4 (Data-)	JX2 - B

- If only one inverter is to be connected, according to the manufacturer's handbook it must be terminated.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect with a shielded twisted-pair cable.
- Where to connect: Terminal strip inside the inverter

Procedure

- If you make the cable yourself, connect the wires as shown in the diagram:

Terminal strip inside the first inverter	Terminal strip inside the second inverter
Terminal	Terminal
JX2 - A	JX2 - A
JX2 - B	JX2 - B

- Wiring the remaining inverters in the same way.
- Terminate the last inverter according to the inverter instructions.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Procedure

1. Connect the data cable to the blocks JX2 A and B on inverter 1.
2. Connect the data cable to the blocks JX2 A and B on inverter 2.
3. Connect the remaining inverters in the same way.
4. Terminate in the last inverter according to the manufacturer's instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Notes on inverter addresses

- Recommendation: Continuous numbering starting with 1.
- Settings: On the inverter operating display.
- Procedure: Follow the manufacturer's documentation for the inverter.

20.3 EHE N250k to N500k-TL

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

The following types are to be connected according to this diagram:
N250K, N250K-TL, N500K-TL

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Enter the communication address on the inverter's display.
Every address may only be used once.
Address range 1 to 247.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.
- Where to connect: Terminal strip inside the inverter

Procedure

- If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	Terminal
▶ 1 (Data+)	JX9 - A
▶ 4 (Data-)	JX9 - B

- If only one inverter is to be connected, terminate it according to the manufacturer's specifications.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect with a shielded twisted-pair cable.
- Where to connect: Terminal strip inside the inverter

Procedure

- If you make the cable yourself, connect the wires as shown in the diagram:

Terminal strip inside the first inverter	Terminal strip inside the second inverter
Terminal	Terminal
JX9 - A	JX9 - A
JX9 - B	JX9 - B

- Wiring the remaining inverters in the same way.
- Terminate the last inverter according to the inverter instructions.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Procedure

1. Connect the data cable to the blocks JX2 A and B on inverter 1.
2. Connect the data cable to the blocks JX2 A and B on inverter 2.
3. Connect the remaining inverters in the same way.
4. Terminate in the last inverter according to the manufacturer's instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Notes on inverter addresses

- Recommendation: Continuous numbering starting with 1.
- Settings: On the inverter operating display.
- Procedure: Follow the manufacturer's documentation for the inverter.

21 EKO Energy

21.1 EKO Energy

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Between the COM round sockets on the outside of the inverter.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (supplied with the inverter).
- or
- self-made, shielded 2 wire data cable with round plug and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter round socket
Terminal	Terminal
▶ 1	▶ 1
▶ 4	▶ 2

2. Insert the round plug into any COM round socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a self-made daisy chain cable.
- Where to connect: Between the COM round sockets on the outside of the inverter.

Procedure

1. Insert the round plug into any round socket on inverter 1.
2. Insert the other end of the cable into any round socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Default settings on the inverter: Communication address 1
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

22 Eltek

22.1 Eltek

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Configure the inverter's communication interface
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. Connect wires as shown in the diagram below.

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ B (Data+)
▶ 4	▶ A (Data-)

2. If only one inverter is to be connected, it must be terminated according to the manufacturer's instructions.
3. Close the inverter cover if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

The inverters are connected together using the RS485 interface. Refer to the manufacturer's inverter manual for the details on how to setup the connection.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

Other configurations

- Activate the RS485 interface Using the inverter operating display.



Note

Pay particular attention to the instructions in the installation manual regarding the address types, activating the communication interface and the master/slave mode.

22.2 Eltek central inverter

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select "Eltek Central" during the inverter detection

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- The communication address has to be assigned (1 - 247)
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Configure the inverter's communication interface
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Connect wires as shown in the diagram below.

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ X12.1 A (Data +)
▶ 3	▶ X12.3 GND
▶ 4	▶ X12.2 B (Data -)

2. If only one inverter is to be connected, it must be terminated according to the manufacturer's instructions.
3. Close the inverter cover if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

The inverters are connected together using the RS485 interface. Refer to the manufacturer's inverter manual for the details on how to setup the connection.

Allocate communication address

- Recommendation: Continuous numbering starting with 1 going to 247
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

Other configurations

- Activate the RS485 interface Using the inverter operating display.



Note

Address settings: from inverter menu: Settings -> Modbus -> Modbus Address
Please refer to the inverter instructions



Note

Please check the default values of the inverter. The inverter has to communicate with the following settings: Baud rate 9600, Data bits: 8, Parity: none and Stop bits: 2.

23 Europa-Solar AG

23.1 Europa-Solar AG

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Integrated interface
- Where to connect: RJ45 socket inside the inverter
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned

Note



The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ1 data cable (optional extra; not supplied)

or

- self-made cable connection with RS485 data cable and terminal block connector.

Caution



Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► **Only connect inverters via the RS485/422 B-Solar-Log™ interface.**

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ Pin 3
▶ 4	▶ Pin 6
▶ 5	▶ Pin 1
▶ 6	▶ Pin 2

3. Insert the RJ45 plug into any RJ45 socket on inverter 1.
4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket inside the inverter

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. Insert the other end of the wire into any RJ45 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter according to the inverter instructions.
6. Close inverters.

24 Evoco

24.1 Evoco

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Between the COM round sockets on the outside of the inverter.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (supplied with the inverter).
- or
- self-made, shielded 2 wire data cable with round plug and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter round socket
Terminal	PIN
▶ 1	▶ 1
▶ 4	▶ 2

2. Insert the round plug into any COM round socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using an Evoco daisy chain cable.
- Where to connect: Between the COM round sockets on the outside of the inverter.

Procedure

1. Insert the round plug into any round socket on inverter 1.
2. Insert the other end of the cable into any round socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Default settings on the inverter: Communication address 1
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

25 Fronius

25.1 Fronius with ComCard

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Connection plug Bridge 4-3 + 5-6	Yes	No	No	RS422

Overview

- The Fronius ComCard RS422 interface integrated as an option; otherwise can be retrofitted using "ComCard retrofit".
- Where to connect: RJ45 socket on the outside of the inverter
- 4 wire cabling with 6-pin terminal block connector
- Communication address must be allocated.
 - Recommendation: Continuous numbering starting with 1.
 - Setting: Using the inverter operating display
 - Procedure: Start according to the inverter's instructions
- Installation steps
 - Switch off the inverters and Solar-Log™
 - (Install Fronius ComCard RS485 interface into the inverter).
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Installing Fronius ComCard RS485 interface

Procedure

- Install the Fronius ComCard RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made Fronius data cable (optional extra; not supplied)
- or
- self-made data cable with RJ45 plug and 6-pin terminal block connector



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 B-Solar-Log™ interface.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ 4
▶ 4	▶ 5
▶ 5	▶ 3
▶ 6	▶ 6

2. In the inverter insert the RJ45 plug into the IN socket.
3. If only one inverter is to be connected this must be terminated.
Insert the supplied connection plug into the RJ45 OUT socket on the inverter.

The connection plug is an 8-pin dummy plug with bridged wires: Bridge wires 3 and 4 and wires 5 and 6.

4. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket on the outside of the inverter

Procedure

1. Insert the RJ45 plug in inverter 1 into the OUT socket.
2. Insert the other end of the wire into the IN socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Insert the supplied connection plug into the RJ45 OUT socket.
5. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.
6. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

25.2 Fronius RL

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Jumper	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Round socket on inverter
- 2-pin wiring
- Communication address does not have to be assigned.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

- The wiring is done using a self-made cable connection with the round plug and the terminal strip plug.
The round plug must be obtained from the manufacturer.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram

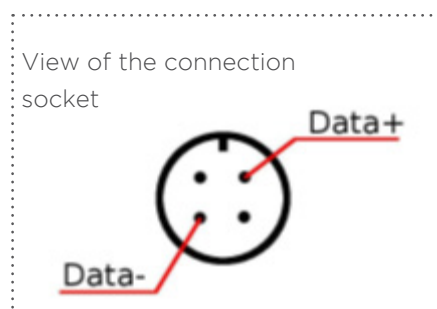


Figure 10: Fronius RL round plug

Solar-Log™ terminal strip connector	Inverters
RS485/422 B	Round socket
▶ 1	▶ 1 Data +
▶ 3	▶ 2 use the cable shield
▶ 4	▶ 3 Data -

2. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Round socket on inverter

Procedure

1. self-made cable connection with round plug and a terminal block plug.
2. Also connect the cable to the next inverter in round plug 1.
3. Connect the other inverters to each other in the same way.

26 Gefran

26.1 Gefran

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Switch	Yes	Yes	Yes	RS485

Overview

- Integrated interface (two independent RS485 ports) (see Figure: Gefran RS485 terminal strip and termination)
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address has to be assigned.
- Installation steps
 - Switch off the inverters and the Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2-wire data cable.



Note

The two independent RS485 ports allow for different ways to wire the Solar-Log™ to the inverters. In addition there are different pin assignments based on whether port A or B is used.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector Terminal strip inside the inverter

Terminal	Terminal strip RS485 (TB3)
► 1 A/Data+	► Pin 1 or 2 (Port A) or Pin 9 or 10 (Port B)
► 4 B/Data-	► Pin 3 or 4 (Port A) or Pin 11 or 12 (Port B)

3. If only one inverter is to be connected this must be terminated.
Set the switch (switch S1 for port A, switch S3 for port B) in the inverter to "1" for terminal resistance.
4. Close the inverter.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

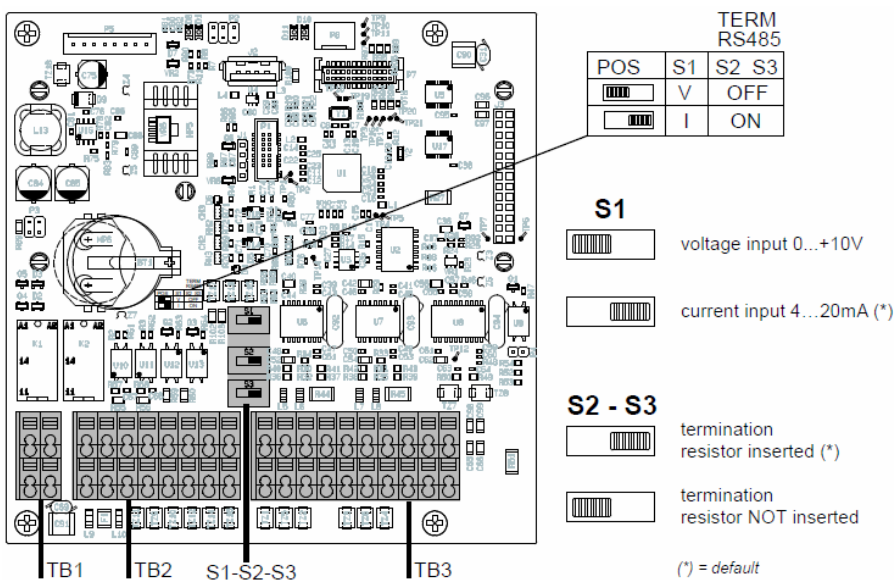


Fig.: Gefran RS485 terminal strip and termination

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
Terminal RS485 (TB3)	Terminal RS485 (TB3)
► Pin 1 or 2 (Port A) or Pin 9 or 10 (Port B)	► Pin 2 or 1 (Port A) or Pin 10 or 9 (Port B)
► Pin 3 or 4 (Port A) or Pin 11 or 12 (Port B)	► Pin 4 or 3 (Port A) or Pin 12 or 11 (Port B)

3. Connect terminals on inverter 1 to the corresponding terminals on inverter 2.
4. Connect the other inverters to each other in the same way (see Figure: 2-pin terminal TB3)
5. Terminate in the last inverter.
Set the switch (switch S1 for port A, switch S3 for port B) to “1” for terminal resistance.
6. Close inverters.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket

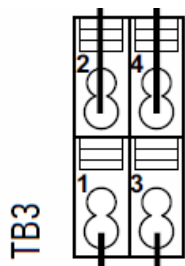


Fig.: 2-pin terminal TB3

Allocate communication address

- Recommendation: Continuous numbering starting with 1 going to 63
- Setting: Using the inverter display
- Procedure: Start according to the inverter’s instructions



Note
The communication port has to be configured. The settings are located in the inverter display under "Configuration -> Communication." The RS485 port used (A or B) has to be configured as follows: Baud rate: 9600bps; Settings: N81; Address: the respective bus address

27 General Electric inverters (GE)

27.1 General Electric inverters (GE)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	No	No	No	No	LAN

Overview

- Integrated interface
- Connected using network cable (patch cable) and Ethernet router or switch
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Before connecting to the Ethernet router or switch and allocating the IP address.

Connect inverters and the Solar-Log™.

The wiring is done using a

- network cable (patch cable/crossover cable) and the
- Ethernet router or switch.

Procedure

1. Set different unit IDs on each inverter in accordance with the inverter's instructions.
2. Connect the Solar-Log™ and the inverter to the router or switch.
3. Allocate an IP address to each inverter using the manufacturer's IP setting kit:

The first three number blocks like the Solar-Log™, e.g. **192.168.178**.49.

The fourth number block: an address that is available, e.g. 192.168.178.50.

Details on using the IP setting kit can be found in the manufacturer's SVT monitoring manual.

28 GESOLAR

28.1 GESOLAR

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	Yes	Yes	RS485


Overview

- Integrated interface
- Where to connect: RJ45 plug outside the housing floor
- 2-pin wiring
- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ2 data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 7
► 4	► 8

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

29 Ginlong

29.1 Ginlong

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Between the COM round sockets on the outside of the inverter.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (supplied with the inverter).
- or
- self-made, shielded 2 wire data cable with round plug and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter round socket
Terminal	PIN
▶ 1	▶ 1
▶ 4	▶ 2

2. Insert the round plug into any COM round socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Wiring using Ginlong’s daisy chain cable.
- Where to connect: Between the COM round sockets on the outside of the inverter.

Procedure

1. Insert the round plug into any round socket on inverter 1.
2. Insert the other end of the cable into any round socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Default settings on the inverter: Communication address 1
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

30 GMDE

30.1 GMDE

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	Yes	Yes	RS485

Overview

- Integrated RS485 interface
- 8-pin cable for the RS485 connection of the Solar-Log™
- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- partially ready-made RJ45 cable (not included)
- or
- self-made data cable with RJ45 plug and 6-pin terminal block connector



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. Connect wires as shown in the diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1 (Data+) A	► 3 A
► 4 (Data-) B	► 6 B

2. Run the wire from the Solar-Log™ to inverter 1 through the hole for the wire on the bottom of the unit.
3. In the inverter insert the RJ45 plug into the "RS-485 out" socket.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable).
- Where to connect: RJ45 socket on the outside of the inverter.

Procedure

1. Insert the RJ45 plug in inverter 1 into the RJ45 socket.
2. Insert the other end of the wire into the other RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.
5. Terminate in the last inverter according to the inverter instructions.

31 GoodWe

31.1 GoodWe

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Integrated RS422 interface
- 8-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- partially ready-made RJ45 cable (not included)
- or
- self-made data cable with RJ45 plug and 6-pin terminal block connector



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. Connect wires as shown in the diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ 6 Data+ (RX_RS485A)
▶ 3	▶ 4 GND
▶ 3	▶ 5 GND
▶ 4	▶ 3 Data- (RX_RS485B)
▶ 5	▶ 8 Data+ (TX_RS485A)
▶ 6	▶ 7 Data- (TX_RS485B)

2. Run the wire from the Solar-Log™ to inverter 1 through the hole for the wire on the bottom of the unit.
3. In the inverter insert the RJ45 plug into the "RS-485 out" socket.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable).
- Where to connect: RJ45 socket on the outside of the inverter.

Procedure

1. Insert the RJ45 plug in inverter 1 into the RJ45 socket.
2. Insert the other end of the wire into the other RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.
5. Terminate in the last inverter according to the inverter instructions.

32 Growatt

32.1 Growatt

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Round sockets on the outside of the inverter.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with round plug and terminal block connector.
- The round plugs required can be obtained from the inverter manufacturer.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter round socket
Terminal	PIN
▶ 1	▶ 2 (+)
▶ 4	▶ 1 (-)

2. Insert the round plug into any COM round socket on the inverter.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Wiring using 2 pin cable with round plugs.
- Where to connect: Round sockets on the outside of the inverter.

Procedure

1. Insert the round plug into any round socket on inverter 1.
2. Insert the other end of the cable into any round socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Address range: 1 - 125
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions



Note

When detecting inverters, there are two options for Growatt in the initial configuration. "Growatt old" and "Growatt Mod". For newer models and modules with the latest firmware version, please select "Growatt Mod", for models with older firmware versions select "Growatt old".

Inverters	Firmware version
Sungold 1500TL/2000TL/3000TL/5000TL	>= G.2.1 Modbus
Growatt 1500TL/2000TL/3000TL/4000TL/4400TL/5000TL	>= G.2.1 Modbus
Growatt 2500MTL/3000MTL	Modbus
Growatt 3600MTL/4200MTL/5000MTL	>= S.2.1 Modbus
Growatt 3600MTL-10/4200MTL-10/5000MTL-10	Modbus
Growatt 2000HF/2500HF/3000HF	Modbus
Growatt 10000UE/12000UE/18000UE/20000UE	Modbus
Growatt 4000UE/5000UE/6000UE	Modbus
Growatt 1500TL-US/2000TL-US/3000TL-US	>= U.1.5 Modbus
Growatt 3600MTL-US/4200MTL-US/5000MTL-US	>= U.1.5 Modbus
Growatt 2000HF-US/2500HF-US/3000HF-US	Modbus
Growatt 8000TL-US/9000TL-US/10000TL-US/11000TL-US	Modbus
Growatt 10000TL3-US/12000TL3-US/18000TL3-US/20000TL3-US	Modbus

33 GTec

33.1 GTec

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- Multi-string technology
- 4-pin wiring
- Communication address does not have to be assigned



Note:

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface

Procedure

Insert the RS485 interface in the bottom of the inverter according to the interface card installation instructions.



Note

Only connect inverter using the [RS485/422 B/C](#) interface.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- self-made, shielded 4 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ Rx +
▶ 3	▶ GND
▶ 4	▶ Rx-
▶ 5	▶ Tx+
▶ 6	▶ Tx-

4. If only one inverter is to be connected, it must be terminated according to the manufacturer's instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface).

Procedure

- Open the inverter as shown in the inverter's instructions.
- Position the inverter up according to the diagram.
- Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
- Connect the other inverters to each other in the same way.
- Terminate in the last inverter according to the inverter instructions.
- Close inverters.

34 Helios Systems

34.1 Helios Systems

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

String Inverter HSI 20

Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on the first inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	4
▶ 3	3
▶ 4	5

4. If only one inverter is to be connected this must be terminated.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Caution



Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: 2 RJ45 sockets

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on the first inverter.
3. Insert the other end of the wire into any RJ45 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter in accordance with the manufacturer's specifications.
6. Close the inverter if no other inverters are to be connected.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Central inverter

Overview

- Integrated interface
- Connected using network cable (patch cable) and Ethernet router or switch
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other



Caution

The IP addresses for the inverter must be in the same Class C network as the Solar-Log™. Alternatively, it is sufficient if the first three groups of digits in the IP addresses are the same.

Allocate communication address

- Setting: Using the inverter operating display.
Please follow the instructions in the manufacturer's manual.

Connect inverters and the Solar-Log™.

The wiring is done using a

- network cable (patch cable) and the
- Ethernet router or switch.

Procedure

1. Set different unit IPs on each inverter in accordance with the inverter's instructions.
2. Connect the Solar-Log™ and the inverter to the router or switch.

35 Huawei

35.1 Huawei

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.

Procedure

- Open the inverter as shown in the inverter’s instructions.
- Insert the RJ45 plug into any RJ45 socket on the inverter.
- If you are making the cable yourself, connect the wires as shown in the following diagram
- Address the inverter according to the manufacturer’s specifications.
Address range 1 to 247.
- If only one inverter is to be connected this must be terminated.
- Close the inverter if no other inverters are to be connected.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	1 or 4
▶ 4	2 or 5



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: 2 RJ45 sockets

Procedure

- Open the inverter as shown in the inverter's instructions.
- Insert the RJ45 plug into any RJ45 socket on the first inverter.
- If you are making the cable yourself, connect the wires as shown in the diagram above.
- Connect the remaining inverters with the network cable.
- Terminate in the last inverter in accordance with the manufacturer's specifications.
- Close the inverter if no other inverters are to be connected.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

36 Hyundai

36.1 Hyundai HPC-050HT-E and HPC-100HT-E

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 CN socket on the outside of the inverter.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 3
► 4	► 6

2. Insert RJ45 plug into socket CN on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

36.2 Hyundai HPC-250HT-E

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: 20 pin connection strip on the outside of the inverter at the top edge of the i-8142iW module.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable and terminal block connector.



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
► 1	► D1+/TxD1+
► 4	► D1-/TxD1-

2. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: 20 pin connection strip on the inverter at the top edge of the i-8142iW module.

Procedure

1. Connect terminal D1+/TxD1+ on inverter 1 to terminal D1+/TxD1+ on inverter 2.
2. Connect terminal D1-/TxD1- on inverter 1 to terminal D1-/TxD1- on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using PC software for configuring inverters.
- Procedure: Start according to the inverter's instructions

37 Ingeteam

37.1 Ingeteam

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Jumper P3	Yes	Yes	Yes	RS485

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Installing the RS485 interface

In the 8-pin connection socket, insert the appropriate plug (Phoenix plug type: FKCT 2.5/8-ST) with RS485 wiring.

Procedure

- ▶ Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ Pin 1 RS485 A (+)
▶ 3	▶ Pin 6 GND
▶ 4	▶ Pin 2 RS485 B (-)

4. If only one inverter is to be connected this must be terminated.
Insert jumper JP3 into the RS485 card.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals "Pin 1-RS485-A (+)", "Pin 6-GND" and "Pin 2-RS485-B (-)" of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Insert jumper JP3 into the RS485 card.
5. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

38 Kaco

38.1 Kaco - Powador

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address



Note
Instructions and a diagram for wiring Kaco Powador inverters together are in the appendix.

Connect inverters to the Solar-Log™

The wiring is done using a

- partly made data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ B
▶ 4	▶ A

4. If only one inverter is to be connected this must be terminated.
Series 2 Powador: Set the DIP switch inside the inverter to ON and all other inverters to OFF.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

The RS485 connections on the terminal strip are each double connections so that the wiring can be continued to the next inverter.

Procedure

1. Connect the data cable to the free terminals A and B of inverter 1.
2. Insert the other end of the cable into terminals A and B of inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Series 2 Powador: Set the DIP switch inside the inverter to ON and all other inverters to OFF.
5. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions



Note

The 25000xi - 33000xi Kaco inverter models are shown as 3 independent inverters in the Solar-Log™. If, for example, such inverters are available, give them addresses 1 and 2. In the Solar-Log™ the inverters will be shown internally as 1.1 / 1.2 - 2.1 / 2.2 etc.

38.2 Kaco – PVI Blue Planet

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Switch	Yes	Yes	Yes	RS485

Overview

- The Solar-Log™ only works with Kaco Blue Planet inverters that have an RS485 interface. The RS232 interface is not supported.

RS232 models: RS485 interface can be retrofitted by the manufacturer.

RS485 models: Integrated interface

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- partly fabricated data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ B
▶ 4	▶ A

4. If only one inverter is to be connected this must be terminated.
In the inverter connect the free terminal A to terminal B using the supplied 330 330 Ω terminating resistor.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

The RS485 connections on the terminal strip are each double connections so that the wiring can be continued to the next inverter.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect the data cable to the free terminals A and B of inverter 1.
3. Insert the other end of the cable into terminals A and B of inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter.
Connect the free terminal A to terminal B using the supplied 330 Ω terminating resistor.
6. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the DIP switch inside the inverter.
- Procedure: Start according to the inverter's instructions

39 KLNE

39.1 KLNE (Solartec and Sunteams)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: 4-pin round socket on the button of the device
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication addresses

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.
- Where to connect: 4-pin round socket on the button of the device

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	X4 socket inverter
Terminal	PIN
▶ 1	4 - Data+
▶ 4	2 - Data-

2. If only one inverter is to be connected, according to the manufacturer’s handbook it must be terminated.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: 4-pin round socket on the button of the device

Procedure

1. Unscrew the side cover as shown in the inverter’s instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector

X4 socket inverter

Terminal	PIN
▶ 1	4 - Data+
▶ 4	2 - Data-

3. Connect the Solar-Log™ cable to socket A on the first inverter.
4. According to the same wiring diagram, connect socket B on the first inverter to socket A on the second inverter using the following diagram.

X4 socket inverter 1

X4 socket inverter 2

Terminal	PIN
▶ 2	2 - Data+
▶ 4	4 - Data-

5. Connect the other inverters to each other in the same way.
6. 6 Terminate the last inverter in accordance with the inverter instructions.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket.



Note:

According to the manufacturer's specifications, a maximum of 31 devices can be connected per RS485 bus.

40 Kostal and Solar-Fabrik

40.1 Kostal Pico and Solar-Fabrik Inverter Convert T (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- Communication address must be allocated.
- Multi-string technology

Pico / Convert inverters are fitted with several MPP trackers: Each string input is monitored separately and ideally adjusted to the connected modules.

Depending on any parallel connections inside the inverter the Solar-Log™ can read the data from up to 3 individual strings.

During the inverter detection, the Solar-Log™ automatically detects how many MPP trackers are active; only the active MPP trackers are displayed. The inverter must be feeding data in for successful detection.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)

or

- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1	▶ A
▶ 3	▶ GND
▶ 4	▶ B

4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals A, B and GND of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.
5. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the software that came with the inverter.
- Procedure: Start according to the inverter's instructions

40.2 Kostal Ethernet Version

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	No	Yes	No	No	LAN

Overview

- Integrated interface
- Connected using network cable (patch cable) and Ethernet router or switch
- Communication address must be allocated.
- Installation steps
 - Assign a static IP address
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™ (RJ45).
 - Connect the inverters to each other (RJ45).



Note:

The RS485 bus address of every inverter has to be configured to 255 so that the Solar-Log can communicate with the inverter.

Connect inverters to the Solar-Log™

The wiring is done using a

- network cable (patch cable/crossover cable) and the
- Ethernet router or switch.

Connect the inverters to each other

The inverters are connected together using the RJ45 interface and, if needed, a router or switch.

Connection setup according to the inverter's instructions.

Assigning IP addresses

- A static IP address has to be assigned to the inverter via the display.
- Please select an IP address with the same class C subnet as the Solar-Log™.
For example: The Solar-Log™ has the IP address 192.168.178.49.
The inverter in this case has to have a free IP address in the same range (from 192.168.178.1 to 192.168.178.254).
- Procedure: Start according to the inverter's instructions

Detection from the Solar-Log™

- For the detection on the Solar-Log™, select "Kostal" as the inverter manufacturer in the **Configuration | Devices | Definition** menu from the **Network** section. Confirm the selection with **Save**.

Detection from the Solar-Log 1200

- When using the Solar-Log 1200, the detection can also be started from the display. Select "Kostal" as the manufacturer for the inverter detection from the "network" interface and start the detection.

Note Power Management



In order that reactive power control functions, the low-voltage guidelines have to be selected in the country settings for the inverter (e.g. "DE-NSR" for the German low-voltage guidelines).

Caution:



The country settings can only be configured once during the initial installation. If the wrong country is selected, it can be reset using the Kostal software tool "PARAKO." This tool can be obtained directly from Kostal after registering.

41 Kstar

41.1 Kstar Multitracker

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select “Kstar” during the inverter detection

Overview

- Integrated interface
- 3-pin wiring
- 2 RJ45 sockets on the outside of the inverter.
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address.
Address range 1 to 32
Settings on the inverter’s display according to the manufacturer’s manual.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1 A/Data +	▶ Pin 1 (A) T/R+
▶ 3 GND	▶ Pin 5 GND
▶ 4 B/Data -	▶ Pin 2 (B) T/R-

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected this must be terminated.
Set the dip switch to “on.”
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable) (**No** Crossover cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter, set the DIP switch to “on.”

Allocate communication address

- Recommendation: Continuous numbering from 1 to 32
- Setting: Using the inverter operating display.
- Procedure: Start according to the inverter’s instructions.



Note

The following setting needs to be enable so that the PM parameters can be received.
SETUP -> REMOTE CNTRL -> ENABLE

41.2 Kstar Singletracker

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select “Kstar SM” during the inverter detection

Overview

- Integrated interface
- 3-pin wiring
- 2 RJ45 sockets on the outside of the inverter.
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address.
Address range 1 to 254
Settings on the inverter’s display according to the manufacturer’s manual.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1 A/Data +	▶ Pin 1 (A) T/R+
▶ 3 GND	▶ Pin 5 GND
▶ 4 B/Data -	▶ Pin 2 (B) T/R-

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected this must be terminated.
Set the dip switch to “on.”
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable) (**No** Crossover cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter, set the DIP switch to “on.”

Allocate communication address

- Recommendation: Continuous numbering from 1 to 254
- Setting: Using the inverter operating display.
- Procedure: Start according to the inverter’s instructions.

42 Mastervolt

42.1 Mastervolt (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 plug outside the housing floor.
- 2-pin wiring
- Communication address does not have to be assigned
- Multi-string technology

Mastervolt inverters are fitted with 1 or 2 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules. Some inverters are also divided internally into 2 or even 3 individual inverters. For example, the QS6400 is recognized as 2 inverters each with 2 strings, an XL 15 as 3 independent XL5000s.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.



Note

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made Mastervolt data cable (optional extra; not supplied)
- or
- self-made cable connection with RJ45 data cable and terminal block connector.

Caution



Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ 4
▶ 4	▶ 3

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 plug outside the housing floor

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

43 Mitsubishi

43.1 Mitsubishi with RS485 interface

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Switch	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: 2 RJ11 sockets inside the inverter.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made RJ11 data cable (optional extra; not supplied)
- or
- self-made cable connection with RJ11 cable connection and terminal block connector.

Procedure

1. Unscrew the front plate of the inverter as shown in the inverter’s instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ11 Inverter
Terminal	PIN
▶ 1	▶ 3
▶ 4	▶ 4

3. Insert the RJ11plug into any RJ11 socket on inverter 1.
4. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch for the terminal resistor to ON.
5. Screw the front plate inverter on again if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a data cable with an RJ11 plug.
- Where to connect: 2 RJ11 sockets at the bottom left inside the inverter.

Procedure

1. Unscrew the front plate of the inverter as shown in the inverter's instructions.
2. Insert the RJ11 plug into any RJ11 socket on inverter 1.
3. Insert the other end of the cable into any RJ11 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter.
Set the DIP switch for the terminal resistor to ON.
6. Screw the inverter front plate on again.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

44 Motech

44.1 Motech (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 plug outside the housing floor
- 2-pin wiring
- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ2 data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ 7
▶ 4	▶ 8

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

45 Oelmaier

45.1 Oelmaier

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip behind service cover
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a terminal block connector.

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	Terminal
▶ 1	▶ A-Data +
▶ 4	▶ B-Data -

3. Terminate the inverter as shown in the inverter’s instructions.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip behind service cover
- 2-pin wiring

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
▶ 1	▶ A-Data +
▶ 4	▶ B-Data -

3. Connect terminals A and B on inverter 1 to the corresponding terminals on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate the inverter as shown in the inverter's instructions.
6. Close inverters.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the solar fitter's menu on the inverter.
- Procedure: Start according to the inverter's instructions

46 Omnik

46.1 Omnik

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	No	Automatic	No	No	RS422

Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 4-pin cable – only on RS485/422 B/C connection of the Solar-Log™
- Communication address does not have to be assigned



Note

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup in the [Configuration | Device | Configuration | Order](#) menu box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 B/C Solar-Log™ interface.

Procedure

1. Connect the wires for the cable connection as shown in the following diagram.

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1 TX+	▶ PIN 4 RX+
▶ 4 TX-	▶ PIN 5 RX-
▶ 5 RX+	▶ PIN 3 TX+
▶ 6 RX-	▶ PIN 6 TX-

2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. Insert the terminal block connector into the Solar-Log™ RS485/422 B/C socket

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket outside the inverter

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.

47 Omron

47.1 Omron

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Bridge 9 -> 10	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. Connect the cable as shown in the following diagram.

Solar-Log™ terminal strip connector	Inverter terminal strip
RS485/422 B	Terminal strip TB401
▶ 1	▶ Pin 4 - Data +
▶ 3	▶ Pin 3 - GND
▶ 4	▶ Pin 5 - Data -

3. If only one inverter is to be connected it must be terminated. To do this a bridge must be inserted on the inverter between pins 9 and 10.
4. Close the inverter if no other inverters are to be connected.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

The wiring is done using a

- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.

Inverter n	Inverter n+1
Terminal strip TB401	Terminal strip TB401
▶ 6	▶ Pin 3 - GND
▶ 7	▶ Pin 4 - Data +
▶ 8	▶ Pin 5 - Data -

2. Connect terminals 6, 7 and 8 on inverter 1 to terminals 3, 4 and 5 on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Bridge between pins 9 and 10.
5. Close inverters.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Inverter settings

The following values must be set in the inverter setup:

- COM_485 to 19200bps
- COM_Pari to Even
- COM_Stop to 2bit
- Set the communication protocol to "Auto" or "Compoway/F"; not "Modbus"

Please follow the instructions in the manufacturer's handbook for this.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

48 Pairan

48.1 Pairan

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Jumper	No	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Round socket on inverter
- 2-pin wiring
- Communication address does not have to be assigned.

Installation steps

- Switch off the inverters and Solar-Log™
- Connect inverters to the Solar-Log™
- Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with the round plug and the terminal strip plug.
The round plug must be obtained from the manufacturer.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram

View of the connection socket

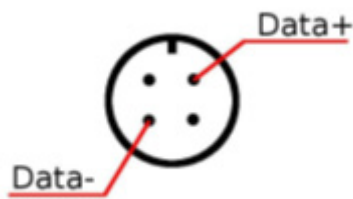


Figure 15: Pairan Round socket

Solar-Log™ terminal strip connector	Inverters
RS485/422 B	Round socket
► 1	► Data +
► 4	► Data -

2. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Round socket on inverter

Procedure

1. self-made cable connection with round plug and a terminal block plug.
2. Also connect the cable to the next inverter in round plug 1.
3. Connect the other inverters to each other in the same way.

49 Platinum

49.1 Platinum with RS485 interface

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Yes	No	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the bottom of the inverter
- 2-pin wiring
- Communication address does not have to be assigned



Note
The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the **Configuration/Basis/Inverters** dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ PIN 6 (A)
▶ 4	▶ PIN 3 (B)

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the bottom of the inverter

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.

49.2 Platinum H

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Configure the inverter's communication interface
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. Connect wires as shown in the diagram below.

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ B (Data +)
▶ 4	▶ A (Data -)

2. If only one inverter is to be connected, it must be terminated according to the manufacturer's instructions.
3. Close the inverter cover if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

The inverters are connected together using the RS485 interface. Refer to the manufacturer's inverter manual for the details on how to setup the connection.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

Other configurations

- Activate the RS485 interface Using the inverter operating display.



Note

Pay particular attention to the instructions in the installation manual regarding the address types, activating the communication interface and the master/slave mode.

50 Powercom

50.1 Powercom

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Switch	Yes	Yes	Yes	RS485

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin wiring
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the DIP switch on the interface card.

Before installing the RS485 interface card:

- Allocate the communication address using the 8 interface card DIP switches:

Example - Communication address 1:

On								
Off								
DIP switch								

Example - Communication address 2:

On								
Off								
DIP switch								

Example - Communication address 3:

On								
Off								
DIP switch								

Example - Communication address 4:

On								
Off								
DIP switch								

Example - Communication address 5:

On								
Off								
DIP switch								

You will find more information at:

http://en.wikipedia.org/wiki/Binary_number.

Installing the RS485 interface

Procedure

- Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BKL2 data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	PIN
▶ 1	▶ R+
▶ 1	▶ T+
▶ 4	▶ R-
▶ 4	▶ T-

- 4. Close the inverter if no other inverters are to be connected.
- 5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter on the retrofitted RS485 interface card

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Connect terminals R+, T+, R- and R+ of inverter 1 to the corresponding terminals on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Close inverters.

51 Power-One/Aurora

51.1 Power-One/Aurora

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Switch	Yes	Yes	Yes	RS485

Overview

- Interface integrated
Sometimes different interfaces are used for indoor and outdoor models.
- Where to connect: RS485 terminal strips inside the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made Power One data cable (optional extra; not supplied)
- or
- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip (Outdoor)
Terminal	Terminal
▶ 1	▶ +T/R (PC)
▶ 3	▶ GND
▶ 4	▶ -T/R (PC)

4. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch for the terminal resistor to ON.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 pin, shielded data cable.
- Where to connect: RS485 terminal strips inside the inverter

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals +T/R, -T/R and RTN of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Set the DIP switch for the terminal resistor to ON.
5. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering from Solar-Log™, starting from 2 (not 1!).
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

52 PrimeVOLT

52.1 PrimeVOLT

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
▶ 1 A/Data+	▶ 1 T/R 1+
▶ 4 B/Data-	▶ 2 T/R 1-

3. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch for the terminal resistor to ON.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
RS485 terminal	RS485 terminal
▶ 1 T/R 1+	▶ 1 T/R 2+
▶ 2 T/R 1-	▶ 2 T/R 2-

- 3. Connect terminals A and B on inverter 1 to the corresponding terminals on inverter 2.
- 4. Connect the other inverters to each other in the same way.
- 5. Terminate in the last inverter.
Set the DIP switch for the terminal resistor to ON.
- 6. Close inverters.
- 7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter DIP switch
- Procedure: Start according to the inverter’s instructions

53 PVPowered

53.1 PV Powered – central inverter RS485

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Jumper	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Modbus Slave socket on interface card
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Set the address of the inverters.
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made 3 pin connection cable and terminal block connector.



Note

The transfer rate for Modbus (RS485) on delivery to the customer is set to 9600bps. Please check these settings.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram
4. If only one inverter is to be connected this must be terminated.
Inside the inverter set the supplied jumper from "J4" to "J5".
5. Setting the address for the inverter: Set SW1 to "0" and SW2 to "1" in order to set the parameters for the inverter with the address "01".
6. Close the inverter if no other inverters are to be connected.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	2 - D+
▶ 3	1 - GND
▶ 4	3 - D-

Connect the inverters to each other

The wiring is done using a

- self-made connection cable and terminal block connector.
- Where to connect: Terminal strip inside the inverter

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	2 - D+
▶ 3	1 - GND
▶ 4	3 - D-

4. Connect terminals GND, D+ and D- of inverter 1 to the corresponding terminals on inverter 2.
5. Connect the other inverters to each other in the same way.
6. Terminate in the last inverter in accordance with the manufacturer’s specifications.
Inside the inverter set the supplied jumper from "J4" to "J5"
7. Address the individual inverters in accordance with the manufacturer’s handbook: Inverter 1 should be the inverter that is directly connected to the Solar-Log™. To this end, set SW1 to "0". Depending on the position of the inverter in the bus, SW2 should be set to 1-9.
If more than 9 inverters are to be connected to one Solar-Log™, please read the manufacturer’s instructions for further information.
8. Close the inverter if no other inverters are to be connected.
9. Insert the terminal block connector into the Solar-Log™ RS485 socket.

53.2 PV Powered - string inverter

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	Yes	-	-	LAN

Overview

- Integrated interface
- Connected using network cable (patch cable) and Ethernet router or switch
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Before connecting to the Ethernet router or switch and allocating the IP address.

Connect inverters and the Solar-Log™.

The wiring is done using a

- network cable (patch cable) and the
- Ethernet router or switch.

Procedure

1. Set different unit IDs on each inverter in accordance with the inverter's instructions.
2. Connect the Solar-Log™ and the inverter to the router or switch.

54 Q3

54.1 Q3 (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Between the COM round sockets on the outside of the inverter.
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

Connecting is done using a self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Connect wires as shown in the diagram below.

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ 1 (RS485-A)
▶ 3	▶ 3 (GND)
▶ 4	▶ 2 (RS485-B)

2. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a self-made daisy chain cable.
- Where to connect: X2 connection socket on outside of the inverter.

Procedure

1. Insert the plug into socket X2 on inverter 1.
2. Insert the other end of the wire into the X2 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Default settings on the inverter: Communication address 1
- Setting: Using the inverter operating display Notes
 - Select Address for ProLog in the Communication / RS485 menu
 - Set Protocol type COM 1 to 9 in the Communication menu
- Procedure: Start according to the inverter's instructions

55 REFUSOL

55.1 REFUSOL

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Terminating plug	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the bottom of the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Instructions for older Solar-Log™/ Refu installations

- Set compatibility

Note

To use active and reactive power management, all of the inverters need to be set to:



- Protocol 1
- 57600 baud
- Parameter 1164 = 2

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. Connect wires as shown in the diagram below.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1	▶ 2
▶ 4	▶ 3

2. If only one inverter is to be connected this must be terminated.
On the sockets "RS485 OUT" with REFUSOL round plugs bypass the connections PIN1 to PIN2 and PIN3 to PIN4.
3. Close the inverter if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using
 - 2-wire, shielded data cable and
 - 4-pin "SACC-M12MS-4SC" plug (two plugs included with the inverter)
- Where to connect: RS485 sockets on the bottom of the inverter.

The RS485 IN and OUT sockets are each double connections so that the wiring can be continued to the next inverter.

Procedure

1. Connect the data cable to the "SACC-M12MS-4SC" plug as shown in the inverter's instructions.
2. Insert one plug into the OUT (X14B) socket of inverter 1.
3. Insert the other end of the wire into the IN socket (X15B) on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter.
On the sockets "RS485 OUT" with REFUSOL round plugs bypass the connections PIN1 to PIN2 and PIN3 to PIN4.
6. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1; highest possible address: 31

Set the following parameters on the inverter's operating display:

1. Press "F1", select **Numerical list**, press "ENTER".
2. Set parameter number **2000** [password protection], press "ENTER" twice.
3. Enter **72555**, press "ENTER"
4. Set parameter number **0406**, press "ENTER"
5. Select sub parameter **0406,3**, press "ENTER"
6. Enter figure for communication **x**
[x = continuous numbering starting with 1; highest possible address: 31], press "ENTER". 31], press "ENTER".

After configuring on the display:

1. Using the installed DC isolating switch turn the inverters on and off briefly so that the settings are activated.
2. Set the date and time on the inverter as shown in the inverter instructions.

Older Solar-Log™ / Refusol installations: Set compatibility

With older Solar-Log™ / Refusol installations the inverter had to be set with additional parameters for Solar-Log™ compatibility. This is only still necessary if an inverter has been replaced because it was faulty or if the system is extended. In these cases the new inverters must also be provided with the extended parameters again.

The extended parameters are only available starting from inverter firmware version 800.2.20 or higher. The firmware version can be checked on the inverter menu:

► "F1" / **Numerical list** / Parameters 1.1 to 1.3

Current firmware versions and update instructions can be found at www.refu-elektronik.de.

Set the following parameters on the inverter's operating display:

1. Press "F1"
2. **Select** Numerical list, **press "ENTER"**.
3. Set parameter number **0407** press "ENTER"
4. Select sub parameter 0407,3, press "ENTER"
5. Enter "2"
[Communication type RS485: Solarlog], press "ENTER".31], press "ENTER".
6. Set parameter number **0420** press "ENTER"
7. Select sub parameter **0420,3**, press "ENTER"
8. Enter the numerical value **9600**, press "ENTER"
9. Using the installed DC isolating switch turn the inverters on and off briefly so that the settings are activated.

Note



The numerical value "2" under point 5 in the settings refers to the old Solar-Log protocol and the value "1" to the native protocol for active and reactive power control.

The value under point 8 refers to the inverter's baud rate and is 9600 for the old Solar-Log protocol and 57600 for the native protocol.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

Note



To use active and reactive power management, all of the inverters need to be set to:

- Protocol 1
 - 57600 baud
 - Parameter 1164 = 2
-

56 REP

56.1 REP

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
▶ 1 A/Data+	▶ 1 T/R 1+
▶ 4 B/Data-	▶ 2 T/R 1-

3. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch for the terminal resistor to ON.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
RS485 terminal	RS485 terminal
▶ 1 T/R 1+	▶ 1 T/R 2+
▶ 2 T/R 1-	▶ 2 T/R 2-

- 3. Connect terminals A and B on inverter 1 to the corresponding terminals on inverter 2.
- 4. Connect the other inverters to each other in the same way.
- 5. Terminate in the last inverter.
Set the DIP switch for the terminal resistor to ON.
- 6. Close inverters.
- 7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter DIP switch
- Procedure: Start according to the inverter’s instructions

57 Reverberi

57.1 Reverberi (EDI Series)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Allocate communication address
 - Terminate inverter

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)

Procedure:

- Open the inverter as shown in the inverter's instructions.
- Pull the free wires through the wire opening in the inverter.
- If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	Terminal strip inverter
Terminal	PIN
▶ 1	5
▶ 1	7
▶ 4	4
▶ 4	6

- If only one inverter is to be connected this must be terminated.
- Close the inverter if no other inverters are to be connected.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring

Procedure

- Open the inverter as shown in the inverter's instructions.
- Connect the other inverters to each other in the same way.
- Terminate in the last inverter.
- Close inverters.
- Allocate communication address
- Recommendation: Continuous numbering from Solar-Log™, starting from 2 (not 1!). Last address at 247.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

58 Riello

58.1 Riello

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned.
- Multi-string technology

Riello inverters are fitted with 1 or 3 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.

Note



The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface

Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.



Note
Only connect inverter using the **RS485/422 B/C** interface.

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Pull the free wires through the wire opening in the inverter.
- 3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

- 4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
- 5. Close the inverter if no other inverters are to be connected.
- 6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Terminate in the last inverter according to the inverter instructions.
- 5. Close inverters.

59 SALICRU

59.1 SALICRU EQX

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned
- Multi-string technology

The inverters are fitted with 1 or 3 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.

Note



The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BKL1 data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.



Note
Only connect inverter using the RS485/422 B interface.

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Pull the free wires through the wire opening in the inverter.
- 3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 1	▶ T+
▶ 4	▶ R-
▶ 4	▶ T-

- 4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
- 5. Close the inverter if no other inverters are to be connected.
- 6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Terminate in the last inverter according to the inverter instructions.
- 5. Close inverters.

59.2 SALICRU EQXLV

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Resistor	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)

or

- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ 4 (A in)
▶ 4	▶ 3 (B in)

2. If only one inverter is to be connected this must be terminated.
Insert 120 Ω terminal resistor.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

Procedure

1. Connect terminal 2 (A out) on inverter 1 to terminal 4 (A in) on inverter 2.
2. Connect terminal 1 (B out) on inverter 1 to terminal 3 (B in) on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter. Insert 120 Ω terminal resistor.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using PC software for configuring inverters.
- Procedure: Start according to the inverter's instructions

60 Samil Power

60.1 Samil Power

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	No	No	No	RS422

Overview

- Integrated interface
- 2 RJ11 sockets inside the inverter.
- 4-pin wiring
- Communication address does not have to be assigned



Note
Only connect inverter using the RS485/422 B/C interface.

Installation steps

- Switch off the inverters and Solar-Log™
- Connect inverters to the Solar-Log™
- Connect the inverters to each other

Connect inverters to the Solar-Log™.

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- self-made, shielded 4 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	Inverter SolarRiver*	Inverter SolarLake
RS485/422 B	RJ 11 socket	RJ45 socket
▶ 1	▶ 2 R+	▶ 3 R+
▶ 4	▶ 1 R-	▶ 6 R-
▶ 5	▶ 4 T+	▶ 1 T+
▶ 6	▶ 3 T-	▶ 2 T-

*Some of the SolarRiver models use the same connection as SolarLake. Setup the wiring according to SolarLake in this case.

**Note:**

The wiring above refers to the RJ45 or RJ11 socket.

3. Insert the RJ11 plug into any RJ11 socket on inverter 1.
4. Close the inverter if no other inverters are to be connected.
5. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: RJ11 sockets

**Note:**

A maximum of 32 inverters can be connected per RS422 bus.

Procedure

Open the inverter as shown in the inverter's instructions.

1. Insert the self-made cable with the RJ11 plug into any RJ11 socket on inverter 1.
2. Insert the RJ11 cable into the 2nd RJ11 socket on inverter 1 and into any RJ11 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

61 Santerno

61.1 Santerno

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: 9 pin socket on the outside of the housing floor.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made Santerno data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable with a 9 pin plug and a terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
► 1	► 1 (A-Line)
► 4	► 2 (B-Line)

2. Insert the plug into socket A on the inverter.
3. If only one inverter is to be connected this must be terminated.
Connect socket A on the Santerno Solar-Log™ data cable to the plug of the first Santerno inverter data cable.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Santerno inverter data cable (optional extra; not supplied)
- Where to connect: 9 pin socket on the outside of the housing floor.

Procedure

1. Insert the Santerno inverter data cable plug into socket B of the first inverter.
 2. Insert the Santerno inverter data cable plug into socket C of the first inverter.
 3. Insert the plug on the other end of the cable into socket C of the second inverter.
 4. Connect the other inverters to each other using socket C.
 5. Terminate in the last inverter.
- Connect socket A on the Santerno Solar Log™ data cable to the plug of the first Santerno data cable.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

62 Schneider Electric

62.1 Schneider Electric SunEzy

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned
- Multi-string technology

The inverters are fitted with 1 or 3 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.



Note

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup in the [Configuration | Device | Configuration | Order](#) menu box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BKL1 data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.



Note

Only connect inverter using the RS485/422 B interface.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.
5. Close inverters.

62.2 Schneider Electric Xantrex GT30E

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	No	Yes	Yes	Sub D9 socket

Overview

- Integrated interface
- Where to connect: Sub D 9 socket X51 inside the inverter.
- 2-pin wiring
- Communication address must be allocated to the inverter.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- self-made, shielded 2 wire data cable and terminal block connector

Procedure:

1. Open the inverter as shown in the inverter’s instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	Inverters
RS485 A	Sub D9 socket X51
▶ 1	▶ 8
▶ 4	▶ 6

3. Close the inverter if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Sub D 9 socket X51 inside the inverter.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram

Solar-Log™ terminal strip connector	Inverters
RS485/422 B	Sub D9 socket X51
▶ 1	▶ 8
▶ 4	▶ 6

2. Connect the other inverters to each other in the same way (1:1).
3. Close the inverter if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

62.3 Schneider Electric Conext TL15000E and Conext TL20000E

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on the first inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram
4. If only one inverter is to be connected this must be terminated.

Solar-Log™ terminal strip connector	Inverters
Terminal	PIN
▶ 1	▶ 4
▶ 3	▶ 3
▶ 4	▶ 5

5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- ▶ Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: 2 RJ45 sockets

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on the first inverter.
3. Insert the other end of the wire into any RJ45 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter in accordance with the manufacturer's specifications.
6. Close the inverter if no other inverters are to be connected.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

63 Schüco

63.1 Schüco SGI series (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Terminating plug	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the bottom of the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 4	► 3 (A)
► 1	► 6 (B)

2. Open the unit cover on the bottom of the inverter.
3. Insert the RJ45 plug into the RJ45 socket on the inverter.
4. If only one inverter is to be connected this must be terminated.
Insert the IP20 terminal plug into a free RJ45 socket (not strictly required for cables up to 100 m long).
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.
6. Close the unit cover on the bottom of the inverter.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the bottom of the inverter

Procedure

1. Open the unit cover on the bottom of the inverter.
2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. Insert the other end of the wire into any RJ45 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter.
Insert the IP20 terminal plug into a free RJ45 socket (not strictly required for cables up to 100 m long).
6. Close the unit cover on the bottom of the inverter.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

64 Shindengen

64.1 Shindengen

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 3 wire data cable with a terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
▶ 1 A/Data+	▶ 30 A (+)
▶ 3 GND	▶ 31 GND
▶ 4 B/Data-	▶ 13 B (-)

3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 3-pin wiring

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Terminal strip inside the inverter	Terminal strip inside the inverter
RS485 terminal	RS485 terminal
▶ 30 A (+)	▶ 30 A (+)
▶ 31 GND	▶ 31 GND
▶ 13 B (-)	▶ 13 B (-)

- 3. Connect terminals on inverter 1 to the corresponding terminals on inverter 2.
- 4. Connect the other inverters to each other in the same way.
- 5. If only one inverter is to be connected, terminate it according to the inverter instructions.
- 6. Close inverters.
- 7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering from 1 to 30
- Procedure: Start according to the inverter’s instructions.

65 Siemens

65.1 Siemens

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Resistor	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the bottom of the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

To connect the Solar-Log™ and the inverters prepare cables with the following pin allocation.

Connecting the Solar-Log™ to the first inverter

Solar-Log™ (4/6 pin terminal plug)	First inverter - RS485 IN (4-pin round plug)
Pin 1 (white)	Pin 2
Pin 4 (brown)	Pin 3

If only one inverter is to be connected this must be terminated (see following item "Bus termination").

Connect the inverters to each other

Inverters must be connected to each other using shielded data cables via the RS485 connections located on the SINVERT PVM.

The following illustration shows the main connection diagram.

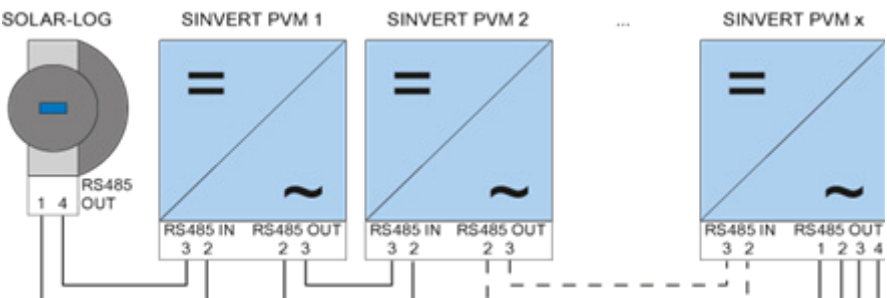


Figure 12: Siemens – connecting inverters together

Use the SACC-M12MS-4SC connectors supplied with the inverter for data cables.

- Connect them as shown in the diagram.
- Connect the bus cable on the last inverter to the RS485 OUT socket using a terminal resistor.

Inverter - RS485 OUT (4-pin round plug)

Pin 2

Pin 3

Inverter - RS485 IN (4-pin round plug)

Pin 2

Pin 3

Bus termination

The bus must be terminated on the RS485 OUT connection of the last inverter with 120Ω.

To do this use the internal 120 Ω resistor and wire the following pins in a round 4-pin plug with two jumpers.

Inverter - RS485 OUT (4-pin round plug)

Pin 1

Pin 3

Pin 2

Pin 4

- Insert this plug into the RS485 OUT socket of the last inverter.

Setting parameters

- Parameters are set using the display on the inverter.
- The date and time must be correctly set and the password "72555" entered before the communication settings.
- The communication parameters are set in the sub-menu "F1 -> Configuration -> Communication -> RS 485."
- The individual menu items are selected with the arrow keys ↑↓ and confirmed by pressing ENTER.
- A consecutive communication address must be allocated to each SINVERT PVM. It is advisable to arrange the addresses consecutively beginning with 1, i.e. 1, 2, 3 up to a maximum of 31. The Solar-Log™ has address "0".
- The baud rate should be set to 57600. Baud rate 9600 must only be used when using the wireless package.

How to set communication address parameters

1. Select "USS address" and press ENTER.
2. Enter the numerical value xx [Address] and press ENTER.
3. Select "Baud rate" and press ENTER.
4. Enter the numerical value [Baud rate] and press ENTER.
5. Select "Protocol" and press ENTER.
6. Select protocol type "1" and press ENTER.

After the parameters have been set on the display the inverter must be switched off for one minute using the installed DC isolation switch. The settings are now applied and set to active. The configuration procedure is described in the manufacturer's handbook. Starting with Solar-Log™ firmware version 2.0.3 (Nov.09) no other parameters must be set on the inverter. The setting up (commissioning) can be continued immediately.

Solar-Log™ compatibility with older PVM installations

With older Solar-Log™ / PVM installations the inverter had to be set with additional parameters for Solar-Log™ compatibility. This is only still necessary if an inverter has been replaced because it was faulty or if the system has been extended. Only in these cases must the additional parameters be set again on the new inverters.

66 SMA

66.1 Overview

SMA inverters do not have an integrated RS485 interface.

However, the following RS485 interfaces can be retrofitted to SMA inverters:

- Special RS485 piggyback card (by Solare Datensysteme GmbH)
- Original SMA RS485 piggyback card (by SMA)

Both piggyback cards can be installed in "Sunny Boy" inverters (except for 3000/4000/5000TL-20 next generation) or "Sunny Mini Central" by SMA. The SMA RS485 data module is required for the SMA -20 and Tripower inverters.

Special RS485 piggyback card

- Only use with Solar-Log™ devices.

Piggyback mixed mode

Inverters with special RS485 piggybacks and original SMA piggybacks or data modules can be used together.

A diagram for wiring in SMA combined mode can be found in the appendix.

SMA Bluetooth mode

The Solar-Log™ BT model is compatible with Bluetooth enabled SMA inverters. The Solar-Log™ BT models allow mixed mode operation (Bluetooth with RS485). Up to 7 SMA inverters can be connected.



Note

Refer to the chapters in the Installation Manual when exchanging SMA inverters.

66.2 SMA connection using special RS485 piggyback card

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Jumper	No	Yes	Yes	RS485

Overview

- Interface not integrated; retrofit the special RS485 piggyback card
- Where to connect: Terminal strip inside the inverter on the piggyback
- Communication address does not have to be assigned
- 4-pin wiring
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Installing the special RS485 piggyback in inverters
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the special RS485 piggyback in inverters

Procedure

- Open the inverter as shown in the inverter's instructions.
- The Piggy Back has to be installed on the inverter's circuit board aligned to the left side under the pin contract strip (**Figure 3, left**).

The print "unten [down]" on the board has to be visible on the bottom left-hand side (**Figure 3, right**).

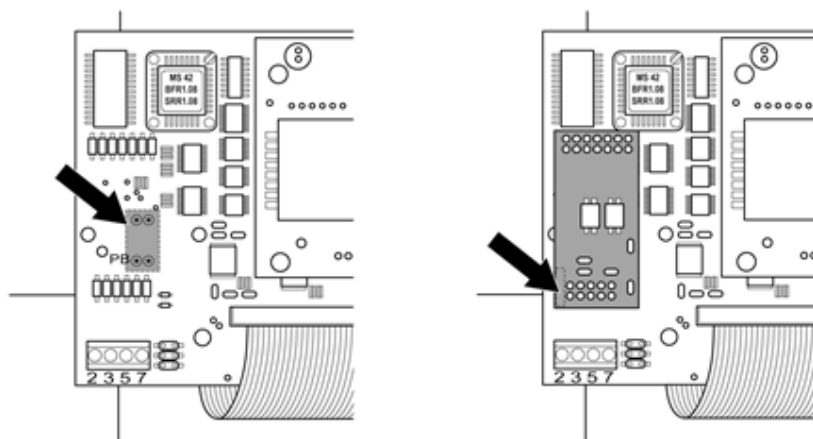


Figure 3: Control board before and after installation of the piggyback

Connect inverters to the Solar-Log™

- The wiring is done using a
 - ready-made data cable (optional extra; not supplied)
 - or
 - self-made, shielded 4 wire data cable and terminal block connector.

Procedure

- 1. Pull the free wires through the wire opening in the inverter.
- 2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ 2
▶ 2	▶ 3
▶ 3	▶ 5
▶ 4	▶ 7

- 3. Pull the wire in the inverter through the insulation sleeve attached to the piggy back.
The wire must be enclosed in the insulating hose inside the inverter.
- 4. Ground the connection: Connect terminal 5 on the inverter to the inverter housing using the supplied flat strip connector.
- 5. If only one inverter is to be connected it must be terminated.
Put the supplied jumper onto the lower pins on the connector strip.

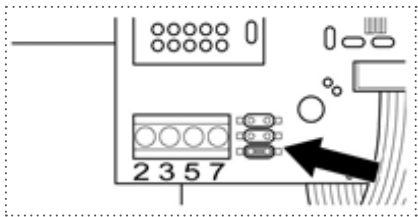


Figure 4: Piggyback - insert jumper

- 6. Close the inverter if no other inverters are to be connected.
- 7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable (e.g. a 25 m ring cable, Solare Datensysteme order 220014)
- Where to connect: Terminal block in inverter (on the retrofitted RS485 interface)

Procedure

1. Pull the wire in the inverter through the insulation sleeve attached to the piggy back

The wire must be enclosed in the insulating hose inside the inverter.

2. Connect all 4 contacts (2, 3, 5, 7) on the terminal strip of inverter 1 to inverter 2



Note

A diagram for wiring in SMA combined mode can be found in the appendix.

3. Connect the other inverters to each other in the same way.

4. Terminate in the last inverter.

Put the supplied jumper onto the lower pins on the connector strip.

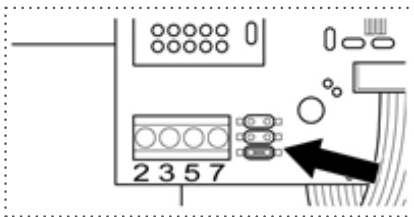


Figure 5: Jumper SMA

5. Close inverters.

66.3 Connect SMA with original SMA RS485 piggy back and the SMARS485 data module

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Resistor jumper	No	Yes	Yes	RS485

Overview

- Interface not integrated; retrofit the SMA RS485 piggyback card
- Where to connect: Terminal strip inside the inverter on the piggyback
- Communication address does not have to be assigned
- 3-pin wiring
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Installing the original SMA RS485 piggyback in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the original SMA RS485 piggyback in the inverter

Procedure

- Install the original SMA RS485 piggy back in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. Pull the cable through the insulation tube.



Note

The wire must be enclosed in the insulating hose inside the inverter.

4. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
► 1	► 2
► 3	► 5
► 4	► 7

5. Ground the connection: Connect terminal 5 on the inverter to the inverter housing using the sup-

plied flat strip connector.

6. If only one inverter is to be connected it must be terminated.
Put the supplied jumper onto the lower pins on the connector strip.

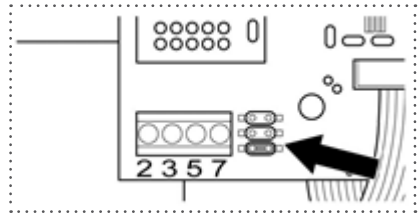


Figure 6: Jumper SMA

7. Close the inverter if no other inverters are to be connected.
8. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 wire, shielded data cable.
- Where to connect: Terminal block in inverter (on the retrofitted RS485 interface)

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect the inverter in accordance with the inverter installation instructions.
3. If only one inverter is to be connected it must be terminated.

Put the supplied jumper onto the lower pins on the connector strip.

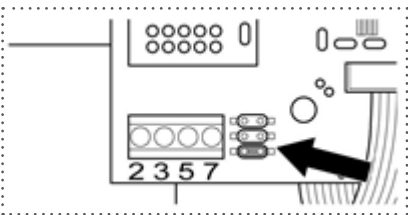


Figure 7: Jumper SMA

4. Close inverters.



Note

A diagram for wiring in SMA combined mode can be found in the appendix.

66.4 SMA Bluetooth mode

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Resistor jumper	No	Yes	Yes	RS485

Bluetooth mode is only possible if the optional Bluetooth module is installed in the Solar-Log™. Bluetooth mode is possible only with Solar-Log™ BT models. All SMA Bluetooth inverters are supported, even Bluetooth Piggy Back cards.

Overview

- All SMA Bluetooth piggybacks are supported.
- Simultaneous operation with SMA SunnyBeam Bluetooth is not possible.
- Solar-Log™ BT Devices:
 - A maximum of 7 SMA Bluetooth inverters can be read
 - Possible to connect inverters from other manufactures

Bluetooth settings on the Solar-Log™

- The Solar-Log™ supports both the "direct connection" and "networked connection" modes. The models from the R2 series only have the option for "networked connections."
- Direct connection: The Solar-Log™ directly connects to each and every inverter individually. This requires that the Solar-Log™ is within range of the inverters. The NET-ID on the inverter and Solar-Log™ is set to 1.
- Networked connection (recommended): The Solar-Log™ connects to one inverter which then relays the connection signals to the other inverters. This greatly increases the range for the Bluetooth connection. Select a NET-ID between 2 and F for both the inverter and Solar-Log™ to use this mode. The NET-ID for the inverter and Solar-Log™ have to match.

Bluetooth addressing on the inverter

- Setting: Rotary switch in the inverter.
Refer to the inverter's manual for more information.

Bluetooth detection

- If possible, carry out Bluetooth detection in the room in which the inverter is installed, in order to avoid any detection errors resulting from lack of range.
- Then test the Bluetooth connection from further away. The maximum range is 50 m in a free field.
- The Easy Installation only works with NET-ID 2 on the inverter.



Note

The preset user name and password in the inverter may not be modified.



Note

The feed-in management functions are also available for the Bluetooth interface. Please note that the necessary settings have to be configured with the manufacturer's software. Please refer to the inverter's user manual for more information.

66.5 SMA Meter Connection Box

An energy meter with S0 output can be connected to the SMA Meter Connection Box. The Meter Connection Box then converts the S0 signal to the RS485 Bus.

The Meter Connection Box is connected to the RS485 socket the same way as with the SMA inverter. In the course of the inverter detection, the Box is recognized as an inverter - SMA is to be selected.

The configuration is done in the [Configuration | Devices | Configuration](#) menu.

Procedure

- Perform detection.
- Select the respective number.
- Enter the generator power.
- Enter the pulse factor.
- Select the type of power meter.
- Save.

66.6 SMA Speedwire



Note

The trademark "Speedwire" is registered trademark of SMA Solar Technology AG in many countries.

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Resistor jumper	No	Yes	Yes	RS485

Overview

- Integrated or retrofitted Speedwire interface
- The inverter's IP address has to be assigned.
- Connected using network cable (patch cable) and Ethernet router or switch
- Installation steps
 - The inverter's has to be assigned a static IP address.
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™ (RJ45).
 - Connect the inverters to each other (RJ45).

Retrofitting the inverter with a SMA Speedwire module

Procedure

- Install the original Speedwire module in the inverter according to the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- network cable (patch cable/crossover cable) and the
- Ethernet router or switch.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the network cable through the inverter's cable opening and connect it to the Speedwire interface.
3. Close the inverter cover if no other inverters are to be connected.
4. Plug the network cable into the RJ45 socket (Ethernet) on the Solar-Log™.

Connect the inverters to each other

The inverters are connected together using the RJ45 interface and, if needed, a router or switch.

Connection setup according to the inverter's instructions.

Assigning IP addresses

- A static IP address has to be assigned to the inverter. This is set to automatic by default. Please refer to the inverter's user manual for more information.
- Please select an IP address with the same subnet as the Solar-Log™.
For example: The Solar-Log™ has the IP address 192.168.178.49.
The inverter in this case has to have a free IP address in the same range (from 192.168.178.2 to 192.168.178.254).
- Procedure: Start according to the inverter's instructions

Detection from the Solar-Log™

- For the detection on the Solar-Log™, select "SMA" as the inverter manufacturer in the **Configuration | Devices | Definition** menu from the **Network** section. Confirm the selection with **Save**.

Detection from the Solar-Log 1200

- When using the Solar-Log 1200, the detection can also be started from the display. Select "SMA" as the manufacturer for the Speedwire detection from the "network" interface and start the detection.



Note for feed-in management

The feed-in management functions are also available for the Bluetooth interface. Please note that the necessary settings have to be configured with the manufacturer's software. Please refer to the inverter's user manual for more information.



Note

Please refer to the instructions in the manufacturer's installation manual in regard to address types.



Note

Wiring with the bus.

Only one network connection is available per inverter with the integrated Speedwire interface.

A router or switch is required when using several inverters or when using the Ethernet (RS45) interface on the Solar-Log™.

67 SolarEdge

67.1 SolarEdge

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Switch	No	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- Communication address must be allocated.
- 3-pin wiring
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Address inverter and set protocol
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	X4 socket RS485-1 inverter
Terminal	PIN
▶ 1	A - Data+
▶ 3	G - GND
▶ 4	B - Data-

4. If only one inverter is to be connected, it must be terminated with DIP switch SW7 according to the manufacturer’s instructions.
5. Screw the inverter cover on again.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

X4 socket RS485-2 inverter n	X4 socket RS485-1 inverter n+1
PIN	PIN
A - Data+	A - Data+
G - GND	G - GND
B - Data-	B - Data-

4. Connect the other inverters to each other in the same way.
5. Terminate the last inverter with DIP switch SW7 according to the manufacturer's instructions.
6. Screw the inverter cover on again.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1; highest possible address: 247.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

Inverter settings

Two settings need to be checked on the inverter's control panel and changed if needed before performing the inverter detection.

1. **Non-SE Logger** has to be set in the **Communication // RS485-1 Conf // Device Type** menu.
2. **SunSpec** has to be activated in the **Communication // RS485-1 Conf // Protocol** menu.

68 Solar Max

68.1 SolarMax – S, C and MT series

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	No	Yes	Yes	Yes	RS485


Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 6-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made RS485 data cable with RJ45 plug and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 7
► 2	► 1
► 2	► 2
► 3	► 3
► 3	► 4
	5 - unused
	6 - unused
► 4	► 8

2. Insert the RJ45 plug into any RJ45 socket on the first inverter.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using the RS485 data cable with an RJ45 plug
- Where to connect: RJ45 socket on the outside of the inverter

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

Note

The inverter's factory setting is communication address 255.

- ▶ On the inverter operating display set the communication address manually to 1 even if only one inverter is connected to the Solar-Log™.

S series:

- ▶ When setting the communication address on the inverter display only the RS485 interface must be activated (set at the factory), not the Ethernet interface that is also installed in the inverter.
-



68.2 SolarMax – Cx series

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	No	Yes	Yes	Yes	RS485

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 6-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Installing the RS485 interface


Procedure

- Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made cable connection using RS485 data cable with RJ45 plug and terminal block connector



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 7
► 2	► 1
► 2	► 2
► 3	► 3
► 3	► 4
	5 - unused
	6 - unused
► 4	► 8

3. Insert the RJ45 plug into any RJ45 socket on inverter 1.
4. Close the inverter if no other inverters are to be connected.

5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket inside the inverter (on the retrofitted RS485 interface)

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. Insert the other end of the wire into any RJ45 socket on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

68.3 SolarMax – E series

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	No	Yes	Yes	Yes	RS485

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 6-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Installing the RS485 interface


Procedure

- Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made cable connection using RS485 data cable, RJ45 plug and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 7
► 2	► 1
► 2	► 2
► 3	► 3
► 3	► 4
	5 - unused
	6 - unused
► 4	► 8

3. Run the wire from the Solar-Log™ to inverter 1 through the hole for the wire on the bottom of the unit.
4. In the inverter insert the RJ45 plug into the "RS-485 out" socket.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using the RS485 data cable with an RJ45 plug
- Where to connect: RJ45 socket inside the inverter (on the retrofitted RS485 interface)

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Run the wire from inverter 1 to inverter 2 through the hole for the wire on the bottom of the unit.
3. Insert the RJ45 plug into the "RS485 in" socket in inverter 1.
4. Insert the other end of the cable with the RJ45 plug into the "RS485 out" socket in inverter.
5. Connect the other inverters using the "RS-485 in" and "RS485 out" sockets.
6. Two cables will be run through each inverter.
7. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

69 SolaX Power

69.1 SolaX Power X1

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Automatic	No	No	RS422

The following types are to be connected according to this diagram:

SL-TL1500, SL-TL2200, SL-TL2500, SL-TL2800, SL-TL3000, SL-TL3300T, SL-TL3600T, SL-TL4400T, SL-TL5000T
Select SolaXPower X1 during the inverter detection.

Overview

- Integrated interface.
- 2 RJ45 sockets on the outside of the inverter.
- 4-pin wiring.
- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™.
 - Connect inverters to the Solar-Log™.
 - Connect the inverters to each other



Note

Only connect inverter using the RS485/422 B or RS485/422 C interface.

Connect inverters to the Solar-Log™.

The wiring is done using a

- self-made, shielded 8 wire data cable and terminal block connector.
- Where to connect: RJ45 socket on the inverter



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you make the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1	▶ Pin 3 - TX+
▶ 4	▶ Pin 6 - TX-
▶ 5	▶ Pin 1 - RX+
▶ 6	▶ Pin 2 - RX-

2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. If only one inverter is to be connected, terminate it according to the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485/422 B or RS485/422 C socket.

Connect the inverters to each other

- Connect using a RJ45 cable (patch cable).
- Where to connect: RJ45 socket.

Procedure

1. Insert the self-made cable with the RJ45 plug into any RJ45 socket on inverter 1. Connect the other end to the terminal plug on the Solar-Log™.
2. Insert the RJ45 cable into the 2nd RJ45 socket on inverter 1 and into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Insert the terminal block connector into the Solar-Log™ RS485/422 B/C socket.
5. Terminate in the last inverter in accordance with the inverter instructions.

69.2 SolaX Power X3

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

The following types are to be connected according to this diagram:

ZDNY-TL10000, ZDNY-TL12000, ZDNY-TL15000, ZDNY-TL17000
Select SolaXPower X3 during the inverter detection.

Overview

- Integrated interface.
- 2 RJ45 sockets on the outside of the inverter.
- 2-pin wiring.
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™.
 - Connect inverters to the Solar-Log™.
 - Connect the inverters to each other
 - Allocate communication address.
Address range 1 to 247
Settings on the inverter’s display according to the manufacturer’s manual.

Connect inverters to the Solar-Log™.

The wiring is done using a

- self-made, shielded 8 wire data cable and terminal block connector.
- Where to connect: RJ45 socket on the inverter

Procedure

1. If you make the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1	▶ Pin 4 - Data+
▶ 4	▶ Pin 5 - Data-

2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. If only one inverter is to be connected, terminate it according to the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a RJ45 cable.
- Where to connect: RJ45 socket.

Procedure

1. Insert the self-made cable with the RJ45 plug into any RJ45 socket on inverter 1. Connect the other end to the terminal plug on the Solar-Log™.
2. Insert the RJ45 cable into the 2nd RJ45 socket on inverter 1 and into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.
5. Terminate in the last inverter in accordance with the inverter instructions.

Allocate communication address

1. Recommendation: Continuous numbering starting with 1.
Address range 1 - 247.
2. Setting: Using the inverter operating display.
3. Procedure: Start according to the inverter's instructions.

70 Solectria

70.1 Solectria >9k

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

The following types are to be connected according to this diagram:

- PVI 10KW
- PVI 13KW
- PVI 15KW

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Change the communication address if required.
Every address may only be used once.
Address range 1 to 16.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.
- Where to connect: Terminal strip inside the inverter

Procedure

- If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	PIN
▶ 1 (Data+)	RS485 A
▶ 3 (Ground)	RS485 G
▶ 4 (Data-)	RS485 B

- If only one inverter is to be connected, according to the manufacturer’s handbook it must be terminated.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect with a shielded twisted-pair cable.
- Where to connect: Terminal strip inside the inverter

Procedure

- If you make the cable yourself, connect the wires as shown in the diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
PIN	PIN
RS485 A	RS485 A
RS485 G	RS485 G
RS485 B	RS485 B

- Wire the remaining inverters to each other according to the manufacturer’s specifications.
- Terminate the last inverter according to the inverter instructions.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

The RS485 connections on the terminal strip are each double connections so that the wiring can also be continued to the next inverter.

Procedure

1. Connect the data cable to the free blocks A, B and G on inverter 1.
2. Connect the other end of the cable to the blocks A, B and G on inverter 2.
3. Connect the remaining inverters in the same way.
4. Terminate in the last inverter according to the manufacturer’s instructions.
5. Close the inverter if no other inverters are to be connected.

Notes on inverter addresses

- Recommendation: Continuous numbering starting with 1.
- Settings: On the inverter operating display.
- Procedure: Follow the manufacturer’s documentation for the inverter.

70.2 Solectria <9k

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	Yes	Yes	RS485


Overview

- Integrated interface
- Where to connect: RJ45 plug outside the housing floor
- 2-pin wiring
- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ2 data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 7 (TX A)
► 3	► 4 or 5 (GND)
► 4	► 8 (RX B)

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected, terminate this according to the inverter instructions (DIP switch on the device).
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket (RJ45 R and L) on the outside of the inverter,

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

Caution



Every inverter has to have an unique ID number (address) between 1 and 16. Please contact Solectria Renewables for support if you have inverters with the same ID number. Only the manufacturer can change the ID numbers.

71 Solutronic

71.1 Solutronic SP25-55 (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip on the outside of the inverter
- 3-pin wiring
- Communication address must be allocated.
- All inverters must be fitted with firmware version 1.2.39 or later.
- Inverters must be grounded otherwise this could lead to problems with inverter detection.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ Pin 1 RS485-A
▶ 3	▶ Pin 3 GND
▶ 4	▶ Pin 2 RS485-B

2. If only one inverter is to be connected it must be terminated.
You will find detailed instructions for setting the inverters on the Solutronic website.
3. Close the inverter if no other inverters are to be connected.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 3 wire, shielded data cable
- Where to connect: Terminal strip on the outside of the inverter

Procedure

1. Insert the plug into the X2 socket on inverter 1.
2. Insert the other end of the wire into the X2 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.

Detailed instructions for setting the inverters are available on the Solutronic website.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Suing the inverter's control panel (starting with inverter firmware 2.62 parameter 89 and parameter 230 for older firmware versions):
- In addition, set the COM port to Protocol 1 - Solutronic protocol (parameter 265).
- Procedure: Start according to the inverter's instructions



Note

The mode Fixed cos Phi has to be set according to the manufacturer's specifications for all of the inverters to use active and reactive power management.

71.2 Solutronic SP100, SP120 (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Round pin plug on the outside of the inverter.
- 3-pin wiring
- Communication address must be allocated.
- All inverters must be fitted with firmware version 1.2.39 or later.
- Inverters must be grounded otherwise this could lead to problems with inverter detection.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 3 wire data cable and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ 2 - Data +
▶ 3	▶ 3 - Ground
▶ 4	▶ 4 - Data -

2. Terminate pin 1 on the terminal block connector and pin 4 on the Solar-Log™ using the 120 Ω terminal resistor.
3. Terminate on the inverter in accordance with the manufacturer’s handbook.
4. Close the inverter if no other inverters are to be connected.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connection in the master-slave data network using an 1:1 cable with M12 plug connector (available as an optional extra from Solutronic)
- Sockets X6 and X7 are connected to each other electrically.
- Where to connect: Round pin plug on the outside of the inverter.

Procedure

1. Insert the plug into the X6 socket on inverter 1.
2. Insert the other end of the wire into the X7 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the manufacturer's instructions.

Allocate communication address

- Setting: Using the inverter's control panel, parameter 89 in the communication menu.
Recommendation: Continuous numbering starting with 1.
Set this in the SSP address menu item.
- Procedure: Start according to the inverter's instructions



Note

The mode Fixed cos Phi has to be set according to the manufacturer's specifications for all of the inverters to use active and reactive power management.

72 Steca

72.1 Steca

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Switch	Yes	Yes	Yes	RS485


Overview

- Integrated interface
- Where to connect: RJ socket, on the outside of the inverter’s interface card.
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made RS485 data cable with RJ45 plug and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 1
► 4	► 2

2. Insert the RJ45 plug into any RJ45 socket on the first inverter.
3. If only one inverter is to be connected this must be terminated.
On the inverter insert the connection plug into the free RJ45 socket.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using the RS485 data cable with RJ45 plug;
Connection cables between the inverters are supplied with the inverters. Use these.
- Where to connect: RJ45 socket on the outside of the inverter

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.
Insert the connection plug into the free RJ45 socket.

Allocate communication address

1. Recommendation: Continuous numbering starting with 1.
2. Setting: Using the rotating switch on the inverter interface card.
3. Procedure: Start according to the inverter's instructions


72.2 Steca (larger than 17k)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the bottom of the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Select the Steca >=17k inverter during the initial configuration.



Note

To use active and reactive power management, all of the inverters need to be set to:

- Protocol 1
- 57600 baud
- Parameter 1164 = 2

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

- Connect wires as shown in the diagram below.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1	▶ 2
▶ 4	▶ 3

- If only one inverter is to be connected this must be terminated.
On the sockets "RS485 OUT" with SACC-M12MS-4SC round plugs bypass the connections PIN1 to PIN2 and PIN3 to PIN4.
- Close the inverter if no other inverters are to be connected.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

Connect using

- a 2-wire shielded data cable and
- 4-pin Phoenix Contact Connection plug type "M12MS SACC-4SC SH" (two plugs included with the inverter).
- Where to connect: RS485 sockets on the bottom of the inverter.

The RS485 IN and OUT sockets are each double connections so that the wiring can be continued to the next inverter.

Procedure

- Wiring the data cable to the "Phoenix Contact Type M12MS SACC-4SC SH" according to the manufacturer's instructions.
- Insert one plug into the OUT (X14B) socket of inverter 1.
- Insert the other end of the wire into the IN socket (X15B) on inverter 2.
- Connect the other inverters to each other in the same way.
- Terminate in the last inverter.
On the sockets "RS485 OUT" with Phoenix contact type M12MS SACC-4SC SH bridge the connections PIN1 to PIN2 and PIN3 to PIN4.
- Close inverters.

Allocate communication address

Recommendation: Continuous numbering starting with 1.
highest possible address: 31

Set the following parameters on the inverter's operating display:

- Press "F1", select **Numerical list**, press "ENTER".
- Set parameter number **2000** [password protection], press "ENTER" twice.
- Enter **72555**, press "ENTER"
- Set parameter number **0406**, press "ENTER"
- Select sub parameter **0406,3**, press "ENTER"
- Enter figure for communication **x**
[**x** = continuous numbering starting with 1; highest possible address: 31], press "ENTER". 31], press "ENTER".

After configuring on the display:

- Using the installed DC isolating switch turn the inverters on and off briefly so that the settings are activated.
- Set the date and time on the inverter as shown in the inverter instructions.

73 Sungrow

73.1 Sungrow

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	120 Ω resistor	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket or COM round sockets on the outside of the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address



Note:
The inverter’s communication connection is then changed to the from the round socket to RJ45. Currently, the SG1,5KTL is still supplied with round sockets.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with round plug and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Round socket inverter for SG1,5KTL
Terminal	PIN
▶ 1	▶ 1 (A)
▶ 4	▶ 2 (B)

Solar-Log™ terminal strip connector	RJ45 socket inverter
Terminal	PIN
▶ 1	▶ 3 (Data+ A)
▶ 4	▶ 6 (Data- B)

- 2. Insert the plug into the socket on the inverter
- 3. If only one inverter is to be connected, terminate this in accordance with the inverter instructions between round socket Pin 2 and 3 with 120Ω.
- 4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Wiring with a self-made RS485 cable,
- RJ45 socket and COM round sockets on the outside of the inverter,

Procedure

Connect a cable between the RJ45 and round sockets.

- Connect the first inverter as explained above.
- Connect the second inverter via the RS485/WiFi socket.
- Connect wires as shown in the diagram below.

Round socket RS485/WiFi Inverter 1	RJ45 socket Inverter 2
Terminal	PIN
▶ 3 (B RS485)	▶ 3 (Data+ B)
▶ 2 (A RS485)	▶ 6 (Data- A)



Figure 11: Sungrow wiring diagram with several inverters

- Connect the other inverters to each other in the same way.
- Terminate the last inverter between round socket Pin 2 and 3 with 120 Ω.
- Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

74 Suntechnics

74.1 Suntechnics (only Solar-Log 1000 and 2000)



Note
Suntechnics inverters can only be connected to the Solar-Log 1000 and 2000, as only this one has a CAN interface.

The following description relates to inverters without transformers produced in or after 2007.

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	CAN bus

Overview

- CAN only to be used on Solar-Log 1000 and 2000 (CAN interface).
- Integrated interface
- Where to connect: CAN socket on the outside of the bottom of the inverter.
- Only use ready-made cable sets.
Two different special cable sets must be ordered separately.
 - Prefabricated cable set between the Solar-Log 1000 and 2000 and the first inverter, including cable termination.
 - Ready-made cable set with 5 pin Phoenix contact connection plug for connecting the inverters to each other.The number of cables are required depends on the number of inverters.

Maximum total cable length: 200 m

- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect the inverters to the Solar-Log 1000 and 2000.

Connection is only done using a ready-made data cable, specially for connecting to the Solar-Log 1000 and 2000 (optional extra; not supplied).

Procedure

1. Insert the CAN plug into the inverter CAN IN socket.
2. If only one inverter is to be connected this must be terminated.
Insert the two 5 pin 120 Ω terminal resistors from the ready-made cable set into the CAN OUT socket.
3. Insert the terminal block connector into the Solar-Log 1000 and 2000 CAN socket.

Connecting inverters to each other (only Solar-Log1000 and 2000)

- Connection is made only with a ready-made data cable specially for connecting the inverters to each other (optional extra: not supplied).
- Where to connect: CAN socket outside the inverter.

Procedure

1. Insert the CAN plug into any CAN OUT socket on inverter 1.
2. Insert the other end of the wire into any CAN IN socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.

Insert the two 5 pin 120 Ω terminal resistors from the ready-made cable set into the CAN OUT socket.

75 Suntigua

75.1 Suntigua

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a terminal block connector.

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
▶ 1 A/Data+	▶ 1 T/R 1+
▶ 4 B/Data-	▶ 2 T/R 1-

3. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch for the terminal resistor to ON.
4. Close inverters.
5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip inside the inverter
- 2-pin wiring

Procedure

- 1. Open the inverter as shown in the inverter's instructions.
- 2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
RS485 terminal	RS485 terminal
▶ 1 T/R 1+	▶ 1 T/R 2+
▶ 2 T/R 1-	▶ 2 T/R 2-

- 3. Connect terminals A and B on inverter 1 to the corresponding terminals on inverter 2.
- 4. Connect the other inverters to each other in the same way.
- 5. Terminate in the last inverter.
Set the DIP switch for the terminal resistor to ON.
- 6. Close inverters.
- 7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter DIP switch
- Procedure: Start according to the inverter's instructions

76 Sunville

76.1 Sunville

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned
- Multi-string technology

The Sunville inverters are fitted with 1 or 3 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.



Note

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface

Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.



Note
Only connect inverter using the **RS485/422 B/C** interface.

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Pull the free wires through the wire opening in the inverter.
- 3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

- 4. Close the inverter if no other inverters are to be connected.
- 5. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

- 1. Open the inverter as shown in the inverter’s instructions.
- 2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Close inverters.

77 Sunways

77.1 Sunways - AT/NT/PT

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
Yes	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
 - 750 V models: 4 RS485 terminals on 10 pin terminal strip
 - 850 V models: 4 pin RS485 terminal strip
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made Sunways data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ RS485+
▶ 4	▶ RS485-

4. If only one inverter is to be connected, terminate it according to the inverter instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter
 - 750 V models: 4 RS485 terminals on 10 pin terminal strip
 - 850 V models: 4 pin RS485 terminal strip

The RS485 connections on the terminal strip are each double connections so that the wiring can be continued to the next inverter.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals RS485+ and RS485- on all inverters to the two data cable wires in accordance with the inverter instructions.
3. Terminate in the last inverter in accordance with the inverter instructions.
4. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

78 Sustainable Energy

78.1 Sustainable Energy

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Terminating plug	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ 4 (A in)
▶ 4	▶ 3 (B in)

2. If only one inverter is to be connected this must be terminated.
Insert 120 Ω terminal resistor.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

Procedure

1. Connect terminal 2 (A out) on inverter 1 to terminal 4 (A in) on inverter 2.
2. Connect terminal 1 (B out) on inverter 1 to terminal 3 (B in) on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter. Insert 120 Ω terminal resistor.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using PC software for configuring inverters.
- Procedure: Start according to the inverter's instructions

79 Trannergy

79.1 Trannergy

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS485

Overview

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned
- Multi-string technology

The Trannergy inverters are fitted with 1 or 3 MPP trackers depending on the model. Each string input is monitored separately and ideally adjusted to the connected modules.

The Solar-Log™ automatically detects how many inverters and strings are active during inverter detection.



Note:

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector

**Note**

Only connect inverter using the RS485/422 B/C interface.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inverter
Terminal	Terminal
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable..
- Where to connect: Terminal strip inside the inverter (on the retrofitted RS485 interface)

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals R+, R-, T+ and T- of inverter 1 to the corresponding terminals on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.
5. Close inverters.

80 Vaillant

80.1 Vaillant – auroPOWER VPI /1 and VPI (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Resistor Switch	Yes	Yes	Yes	RS485

Overview

- VPI until 2005 RS485 interface can be retrofitted by the manufacturer. Interface integrated - activate using operating display.
- Where to connect: Terminal strip inside the inverter
- 2-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Models until 2005 Retrofit RS485 interface
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made data cable (optional extra; not supplied)
- or
- self-made, shielded 2 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ B
▶ 4	▶ A

4. If only one inverter is to be connected this must be terminated.
In the inverter connect the free terminal A to terminal B using the supplied 330 Ω terminating resistor.
Devices without a transformer: From unit generation VPI xx00 /2 the 330 Ω resistor is switched on using the DIP switch. When the unit is delivered the terminal resistor is switched on.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 2 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter

The RS485 connections on the terminal strip are each double connections so that the wiring can be continued to the next inverter.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminal A on inverter 1 to terminal A on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter. In the inverter connect the free terminal A to terminal B using the supplied 330 Ω terminating resistor.
Devices without a transformer: From unit generation VPI xx00 /2 the 330 Ω resistor is switched on using the DIP switch. When the unit is delivered the terminal resistor is switched on.
5. Close inverters.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting:
Units without transformers: using the DIP switch inside the inverter
Units with transformers: using the inverter operating display.
- Procedure: Start according to the inverter's instructions

81 Valenia

81.1 Valenia

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip on internal interface card
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Set the address of the inverters.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made 3 pin connection cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter’s instructions.
2. If you are making the cable yourself, connect the wires as shown in the following diagram
3. If only one inverter is to be connected, according to the manufacturer’s handbook it must be terminated.
4. Set the address for the inverter on the inverter itself.
5. Close the inverter if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	PIN
► 1	P
► 3	0 V
► 4	N



Note
The inverter terminal strip’s 5V output must not be connected to the Solar-Log™.

Connect the inverters to each other

The wiring is done using a

- self-made connection cable and terminal block connector.
- Where to connect: Terminal strip on internal interface card

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Connect terminals P, N and 0V of the first inverter 1 to the corresponding terminals on the next inverter.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the manufacturer's specifications.
5. Address the individual inverters in accordance with the manufacturer's manual.
6. Close the inverter if no other inverters are to be connected.
7. Insert the terminal block connector into the Solar-Log™ RS485 socket.

82 Vectron

82.1 Vectron

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- 3-pin wiring
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 3 wire data cable with a terminal block connector.

Procedure

1. Get access to the inverter interface
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Terminal strip inside the inverter
Terminal	RS485 terminal
▶ 1	▶ 1 A (Data+)
▶ 3	▶ 6 GND
▶ 4	▶ 3 B (Data-)

3. If only one inverter is to be connected this must be terminated.
In the inverter, set the DIP switch S1 for the terminal resistor to ON.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Where to connect: Terminal strip on the inverter
- 3-pin wiring

Procedure

1. Get access to the inverter interface
2. If you are making the cable yourself, connect the wires as shown in the following diagram:

Terminal strip inside the inverter	Terminal strip inside the inverter
RS485 terminal	RS485 terminal
▶ 1 A (Data+)	▶ 2 A (Data+)
▶ 6 GND	▶ 6 GND
▶ 3 B (Data-)	▶ 4 B (Data-)

3. Connect terminals on inverter 1 to the corresponding terminals on inverter 2.
4. Connect the other inverters to each other in the same way.
5. Terminate in the last inverter.
Set the DIP S1 switch for the terminal resistor to ON.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1 going to 30
- Setting: Using the inverter DIP switch
- Procedure: Start according to the inverter's instructions



Note

A maximum of 20 inverters can be connected per RS485 bus.

83 Vision

83.1 Vision Multitracker

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select “Vision” during the inverter detection

Overview

- Integrated interface
- 3-pin wiring
- 2 RJ45 sockets on the outside of the inverter.
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address.
Address range 1 to 32
Settings on the inverter’s display according to the manufacturer’s manual.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1 A/Data +	▶ Pin 1 (A) T/R+
▶ 3 GND	▶ Pin 5 GND
▶ 4 B/Data -	▶ Pin 2 (B) T/R-

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected this must be terminated.
Set the dip switch to “on.”
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable) (**No** Crossover cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter, set the DIP switch to “on.”

Allocate communication address

- Recommendation: Continuous numbering from 1 to 32
- Setting: Using the inverter operating display.
- Procedure: Start according to the inverter’s instructions.



Note

The following setting needs to be enable so that the PM parameters can be received.
SETUP -> REMOTE CNTRL -> ENABLE

83.2 Vision Singletracker

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	DIP switch	Yes	Yes	Yes	RS485

Select “Vision SM” during the inverter detection

Overview

- Integrated interface
- 3-pin wiring
- 2 RJ45 sockets on the outside of the inverter.
- Communication address must be allocated.
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address.
Address range 1 to 254
Settings on the inverter’s display according to the manufacturer’s manual.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!
The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are fabricating the cable yourself, connect the wires as shown in the following diagram.

Solar-Log™ terminal strip connector	RS485 inverter socket
Terminal	PIN
▶ 1 A/Data +	▶ Pin 1 (A) T/R+
▶ 3 GND	▶ Pin 5 GND
▶ 4 B/Data -	▶ Pin 2 (B) T/R-

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected this must be terminated.
Set the dip switch to “on.”
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable) (**No** Crossover cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into the free RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter, set the DIP switch to “on.”

Allocate communication address

- Recommendation: Continuous numbering from 1 to 254
- Setting: Using the inverter operating display.
- Procedure: Start according to the inverter’s instructions.

84 Voltwerk

84.1 Voltwerk (only Solar-Log 1000 and 2000)



Note

Voltwerk inverters can only be connected to the Solar-Log 1000 and 2000, as only this one has a CAN interface.

The following description relates to inverters without transformers produced in or after 2007.

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	CAN bus

Overview

- CAN only to be used on Solar-Log 1000 and 2000 (CAN interface).
- Integrated interface
- Where to connect: CAN socket on the outside of the bottom of the inverter.
- Only use ready-made cable sets.

Two different special cable sets must be ordered separately.

- Prefabricated cable set between the Solar-Log 1000 and 2000 and the first inverter, including cable termination.
- Ready-made cable set with 5 pin Phoenix contact connection plug for connecting the inverters to each other.

The number of cables are required depends on the number of inverters.

Maximum total cable length: 200 m

- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect the inverters to the Solar-Log 1000 and 2000.

Connection is only done using a ready-made data cable, specially for connecting to the Solar-Log 1000 and 2000 (optional extra; not supplied).

Procedure

1. Insert the CAN plug into the inverter CAN IN socket.
2. If only one inverter is to be connected this must be terminated.
Insert the two 5 pin 120 Ω terminal resistors from the ready-made cable set into the CAN OUT socket.
3. Insert the terminal block connector into the Solar-Log 1000 and 2000 CAN socket.

Connecting inverters to each other (only Solar-Log1000 and 2000)

- Connection is made only with a ready-made data cable specially for connecting the inverters to each other (optional extra: not supplied).
- Where to connect: CAN socket outside the inverter.

Procedure

1. Insert the CAN plug into any CAN OUT socket on inverter 1.
2. Insert the other end of the wire into any CAN IN socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter.

Insert the two 5 pin 120 Ω terminal resistors from the ready-made cable set into the CAN OUT socket.

85 WINAICO

85.1 WINAICO

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Switch	Yes	Yes	Yes	RS485

- Interface not integrated; Retrofit RS485 interface card.
- 4-pin wiring
- Communication address must be allocated.
- Installation steps
 - Allocate communication address
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Setting: Using the DIP switch on the interface card.

Before installing the RS485 interface card:

- ▶ Allocate the communication address using the 8 interface card DIP switches:

Example - Communication address 1:

On								
Off								
DIP switch								

Example - Communication address 2:

On								
Off								
DIP switch								

Example - Communication address 3:

On								
Off								
DIP switch								

Example - Communication address 4:

On								
Off								
DIP switch								

Example - Communication address 5:

On								
Off								
DIP switch								

You will find more information at:

http://en.wikipedia.org/wiki/Binary_number.

Installing the RS485 interface

Procedure

- Install the RS485 interface in the inverter in accordance with the interface card installation instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BKL2 data cable (optional extra; not supplied)
- or
- self-made, shielded 4 wire data cable and terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	Inverter terminal strip
Terminal	Terminal
▶ 1	▶ R+
▶ 4	▶ R-
▶ 5	▶ T+
▶ 6	▶ T-

- 4. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
- 5. Close the inverter if no other inverters are to be connected.
- 6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a 4 wire, shielded data cable
- Where to connect: Terminal strip inside the inverter on the retrofitted RS485 interface card

Procedure

- 1. Open the inverter as shown in the inverter's instructions.
- 2. Connect terminals R+, T+, R- and R+ of inverter 1 to the corresponding terminals on inverter 2.
- 3. Connect the other inverters to each other in the same way.
- 4. Terminate in the last inverter according to the inverter instructions.
- 5. Close inverters.

86 Yaskawa

86.1 Yaskawa

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: Terminal strip inside the inverter
- Communication address must be allocated.
- 3-pin wiring
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Address the inverter.
 - Connect the inverters to each other
 - Terminate the inverter as shown in the inverter's instructions.

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made cable connection with terminal block connector.

Procedure

1. Open the inverter as shown in the inverter's instructions.
2. Pull the free wires through the wire opening in the inverter.
3. If you are making the cable yourself, connect the wires as shown in the following diagram:



Note

Please note that the connection label (e.g. 2-6) refers to the second row on the terminal block, connection 6).

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1-(Data+) A	2-6 D+
▶ 3-GND	1-8 GND
▶ 4-(Data-) B	2-7 D-

4. If only one inverter is to be connected, it must be terminated according to the manufacturer's instructions.
5. Close the inverter cover if no other inverters are to be connected.
6. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

The inverters are connected together using the RS485 interface. Refer to the manufacturer's inverter manual for the details on how to setup the connection.

Allocate communication address

- Recommendation: Continuous numbering starting with 1; highest possible address: 247.
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions



Note

Please refer to the manufacturer's notes in regard to the addressing in the installation manual.

87 Zentral Solar Deutschland ZSD

87.1 Zentral Solar Deutschland ZSD (RS485)

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 plug outside the housing floor
- 2-pin wiring
- Communication address does not have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ2 data cable (optional extra; not supplied)

or

- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

► Only connect inverters via the RS485/422 Solar-Log™ interface(s).

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
► 1	► 7
► 4	► 8

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter in accordance with the inverter instructions.

87.2 Zentral Solar Deutschland ZSD - zentralpower

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	-	Yes	Yes	Yes	RS485

Overview

- Integrated interface
- Where to connect: RJ45 socket on the outside of the inverter
- 2-pin wiring
- The communication addresses (1-247) have to be assigned
- Installation steps
 - Switch off the inverters and Solar-Log™
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other
 - Allocate communication address

Connect inverters to the Solar-Log™

The wiring is done using a

- self-made, shielded 2 wire data cable with a RJ45 socket and a terminal block connector.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ 45 socket
Terminal	PIN
▶ 1	▶ 4 (+)
▶ 4	▶ 3 (-)

2. Insert the RJ45 plug into the RJ45 socket on the inverter.
3. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Connect the inverters to each other

- Wiring using 2 pin cable with round plugs.
- Where to connect: Round sockets on the outside of the inverter.

Procedure

1. Insert the RJ45 plug into the RJ45 socket on the first inverter.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Insert the terminal block connector into the Solar-Log™ RS485 socket.

Allocate communication address

- Recommendation: Continuous numbering starting with 1.
- Address range: 1 - 247
- Setting: Using the inverter operating display
- Procedure: Start according to the inverter's instructions

88 Zeversolar

88.1 Zeversolar

Easy Installation	Termination	Addressing	Sensors RS485	Meters RS485	Interface
No	Yes	No	No	No	RS422

Overview

- Interface not integrated; Retrofit RS485 interface card.
- Where to connect: RJ45 socket on the outside of the inverter
- 4-pin cable – only on RS485/422 B connection of the Solar-Log™
- Communication address does not have to be assigned



Note

The order in which the inverters are displayed in the Solar-Log™ after detection is random. We strongly recommend that you change the order of the inverters immediately after detection at startup, in the [Configuration/Basis/Inverters](#) dialog box. The inverters can be identified using the displayed serial number.

- Installation steps
 - Switch off the inverters and Solar-Log™
 - Install the RS485 interface in the inverter
 - Connect inverters to the Solar-Log™
 - Connect the inverters to each other

Installing the RS485 interface Procedure

- Insert the RS485 interface in the bottom of the inverter in accordance with the interface card installation instructions and screw in.

Connect inverters to the Solar-Log™

The wiring is done using a

- ready-made BRJ1 data cable (optional extra; not supplied)
- or
- self-made cable connection with RS485 data cable and terminal block connector.



Caution

Risk of damage to the unit!

The Solar-Log™ also has an RJ45 socket, which must never be connected to the RJ45 socket on the inverter.

- Only connect inverters via the RS485/422 B-Solar-Log™ interface.

**Note**

Only connect inverter using the RS485/422 B interface.

Procedure

1. If you are making the cable yourself, connect the wires as shown in the following diagram:

Solar-Log™ terminal strip connector	RJ45 inverter
Terminal	PIN
▶ 1	▶ Pin 3
▶ 4	▶ Pin 6
▶ 5	▶ Pin 1
▶ 6	▶ Pin 2

2. Insert the RJ45 plug into any RJ45 socket on inverter 1.
3. If only one inverter is to be connected terminate this in accordance with the inverter instructions.
4. Insert the terminal block connector into the Solar-Log™ RS485/422 B socket.

Connect the inverters to each other

- Connect using a network cable (patch cable)
- Where to connect: RJ45 socket on the outside of the inverter

Procedure

1. Insert the RJ45 plug into any RJ45 socket on inverter 1.
2. Insert the other end of the wire into any RJ45 socket on inverter 2.
3. Connect the other inverters to each other in the same way.
4. Terminate in the last inverter according to the inverter instructions.

89 Appendix

89.1 SMA mixed wiring

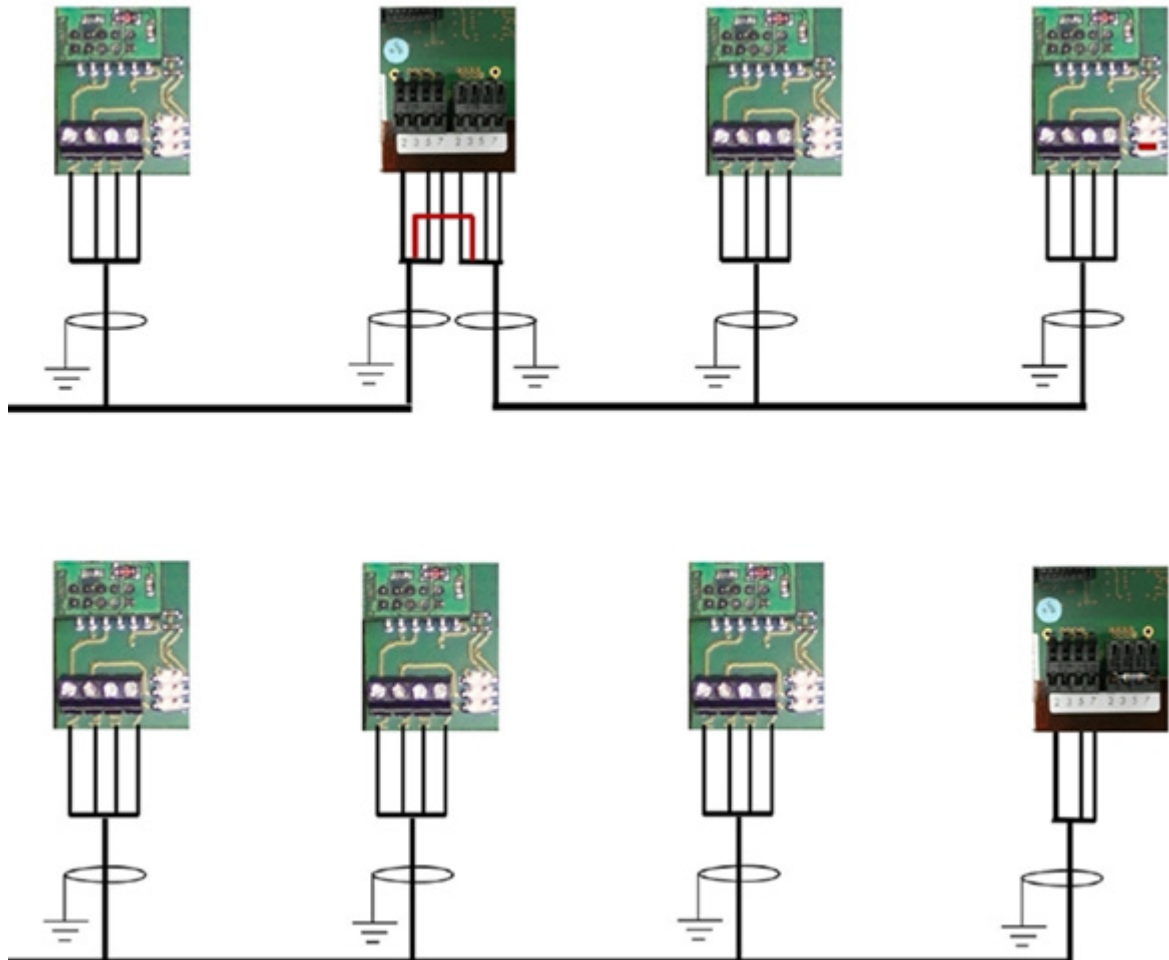


Figure 16: SMA mixed wiring

89.2 Interconnection of Kaco Powador inverters

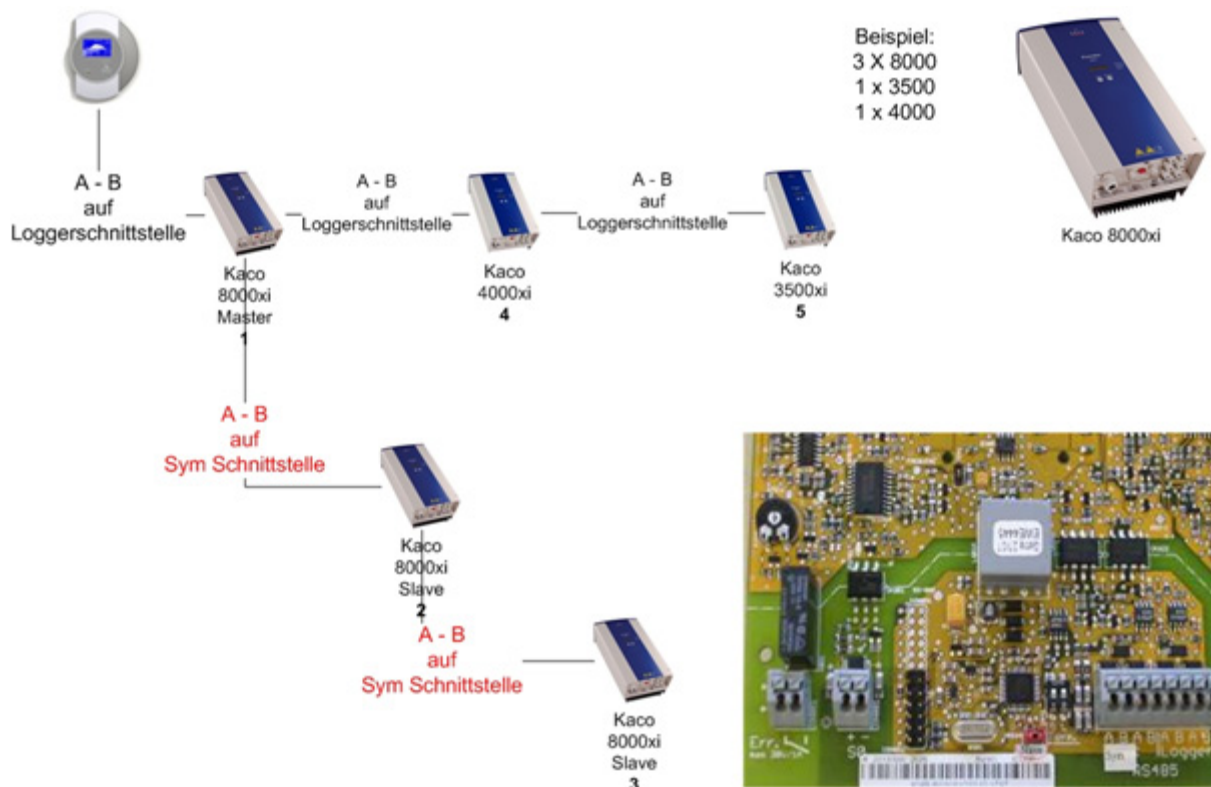


Figure 17: Interconnection of Kaco Powador inverters

Instructions for Powador 6400xi and 8000xi

- Interconnection of Powador 6400Xi and 8000xi:
 - ▶ Set 1 inverter as "Master", 2 as "Slaves";
Read the labeling on the inverter circuit board!
 - ▶ Clamp the Solar-Log™ data cable to the "LOGGER" terminal strip on the Master inverter.
 - ▶ Also connect the inverters to each other through the "SYM" terminal strip
 - ▶ Connect any additional inverters through the "Logger" terminal strip
 - ▶ On the inverter operating display:
 - Set the communication addresses, numbering consecutively
 - ▶ On the inverter operating display: **Switch "SYM Bus" to active**
- Powador 6400Xi and 8000xi stand-alone mode:
 - ▶ Set the inverter to "Slave", irrespective of labeling on the circuit board
 - ▶ Clamp the Solar-Log™ data cable to the "SYM Bus" terminal strip
 - ▶ On the inverter operating display: **Switch "SYM Bus" to inactive**
 - ▶ On the inverter operating display: Set the communication addresses, numbering consecutively

90 List of figures

Figure 1: RJ45 plug pin assignments 14

Figure 2: RJ11 plug pin assignments 15

Figure 13: Albatech APL block connector 24

Figure 14: RJ14 socket pin allocation..... 35

Figure 10: Fronius RL round plug..... 87

Fig.: Gefran RS485 terminal strip and termination..... 89

Fig.: 2-pin terminal TB3..... 90

Figure 15: Pairan Round socket..... 140

Figure 12: Siemens – connecting inverters together 183

Figure 3: Control board before and after installation of the piggyback 187

Figure 4: Piggyback - insert jumper 188

Figure 5: Jumper SMA..... 189

Figure 6: Jumper SMA..... 191

Figure 7: Jumper SMA..... 191

Figure 11: Sungrow wiring diagram with several inverters..... 221

Figure 16: SMA mixed wiring 256

Figure 17: Interconnection of Kaco Powador inverters..... 257

Solare Datensysteme GmbH
Fuhrmannstraße 9
72351 Geislingen-Binsdorf
Germany
Tel: +49 7428 9418 200
Fax: +49 7428 9418 280
info@solar-log.com
www.solar-log.com
www.solarlog-WEB.com
Hotline: +49 7428 9418 660

The copyright of these instructions remains with the manufacturer. No part of these instructions may be reproduced in any form or processed, duplicated or distributed using electronic systems without the written consent of Solare Datensysteme GmbH.

Subject to change without notice.

Non-compliance resulting in contradiction of the above-mentioned specifications shall result in obligation to provide compensation for damages.

All brands and trademarks contained in this manual are the sole property of the respective manufacturer, which we respect and recognize herewith. The trademark "Speedwire" is registered trademark of SMA Solar Technology AG in many countries.

